



CrossTrax® All-Wheel Drive Kit

2015 and After Reelmaster® 5010 Series Traction Unit

Model No. 03655

Installation Instructions

This product complies with all relevant European directives. For details, please see the Declaration of Incorporation (DOI) at the back of this publication.

Note: This kit, when installed to Reelmaster 5010 series Traction Units, is covered by Patent # 7,017,703.

⚠ WARNING

Bodily injury could occur if the traction unit rolls over.


When operating machine, always use the seat belt and ROPS together.

Safety

Safety and Instructional Decals




Safety decals and instructions are easily visible to the operator and are located near any area of potential danger. Replace any decal that is damaged or missing.

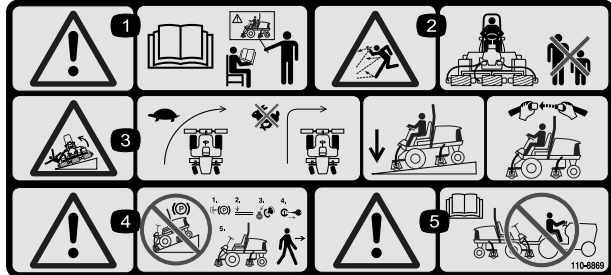

110-8869

r:\decals\110-8869

1. Warning—read the *Operator's Manual*, do not operate this machine unless you are trained.
2. Thrown object hazard—keep bystanders away from the machine.
3. Tipping hazard—slow machine before turning, do not turn at high speeds; lower the cutting unit when driving down slopes; use a roll over protection system and wear the seat belt. Always wear a seat belt when a ROPS is in place.
4. Warning—do not park the machine on slopes; engage the parking brake, lower the cutting decks, shut off the engine and remove the ignition key before leaving the machine.
5. Warning—read the *Operator's Manual*, do not tow the machine.

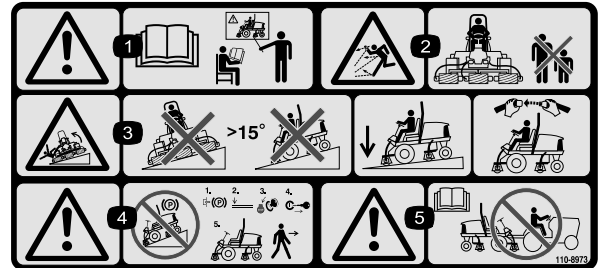

110-8973

r:\decals\110-8973

(Affix over part no. 110-8869 for CE*)

* This safety decal includes a slope warning required on the machine for compliance to the European Lawn Mower Safety Standard EN836:1997. The conservative maximum slope angles indicated for operation of this machine are prescribed by and required by this standard.

1. Warning—read the *Operator's Manual*, do not operate this machine unless you are trained.
2. Thrown object hazard—keep bystanders away from the machine.
3. Tipping hazard—do not operate on slopes greater than 15°; lower the cutting decks when operating on slopes; wear the safety belt.
4. Warning—do not park the machine on slopes; engage the parking brake, lower the cutting decks, shut off the engine and remove the ignition key before leaving the machine.
5. Warning—read the *Operator's Manual* before towing the machine.



Installation

Loose Parts

Use the chart below to verify that all parts have been shipped.

Procedure	Description	Qty.	Use
1	No parts required	–	Prepare the machine
2	Right wheel motor Left wheel motor Hydraulic fitting, 45° Bolt (1/2 x 2-1/4 inch) Lockwasher (1/2 inch)	1 1 4 8 8	Mount the wheel motor assemblies.
3	Manifold Hydraulic fitting, straight Diagnostic fitting Dust cap Bolt (3/8 x 1-3/4 inches) Lockwasher (3/8 inch) Spacer	1 7 2 2 3 3 3	Install the manifold.
4	Hydraulic hose	4	Install the wheel motor hoses.
5	Hydraulic tube, Part No. 108-7624 Hydraulic tube, Part No. 108-7625 Hydraulic tube, Part No. 108-7626 Bulkhead lock nut Tube clamp halves Cap screw (5/16 x 1-1/2 inches) Flat washer (.344 x .688) Lock nut (5/16 inch)	1 1 1 3 2 1 1 1	Installing the manifold tubes.
6	No parts required	–	Removing the front tube and the hydraulic hose.
7	Hydraulic tube, Part No. 108-7622 Hydraulic tube, Part No. 108-7623 Hydraulic fitting, 90° Hydraulic hose Cable tie	1 1 1 1 3	Installing the front tubes and the hydraulic hose.
8	No parts required	–	Checking the hydraulic hoses and tubes.
9	Decal Decal 110–8869, danger Decal 110–8973, CE danger (Europe only)	2 1 1	Installing the decals.

1

Preparing the Machine

No Parts Required

Procedure

1. Park the machine on a level surface.
2. Engage the parking brake.
3. Press the enable/disable switch to the DISENGAGE position.
4. Move the lower mow/raise control to the MOW position.
5. Shut off the engine, and remove the key.
6. Wait for all parts to stop moving.
7. Allow the engine to cool.

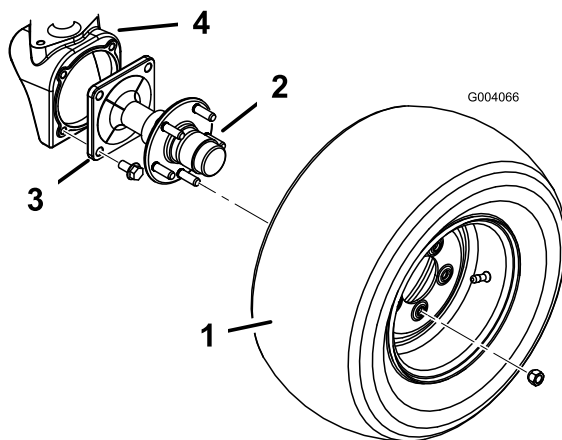


Figure 1

- | | |
|----------------------|------------------|
| 1. Rear tire | 3. Wheel spindle |
| 2. Wheel spindle hub | 4. Wheel housing |

3. Remove the 4 flange bolts securing each wheel spindle to each wheel housing (Figure 1). Remove the wheel spindles. The wheel hub does not need to be removed from the spindle.
4. Install two 45° hydraulic fittings into each wheel motor assembly (Figure 2). Position the fittings so they point straight to the rear.

Note: Make sure the O-rings are lubricated and in position on all of the fittings before installation.

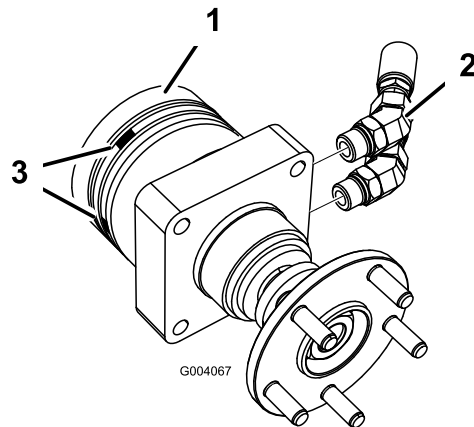


Figure 2

Right side wheel motor shown

- | | |
|-----------------|---------------------------|
| 1. Wheel motor | 3. Identification grooves |
| 2. 45° fittings | |

2

Mounting the Wheel Motor Assemblies

Parts needed for this procedure:

1	Right wheel motor
1	Left wheel motor
4	Hydraulic fitting, 45°
8	Bolt (1/2 x 2-1/4 inch)
8	Lockwasher (1/2 inch)

Procedure

1. Jack up the rear of the machine and support it with jack stands.
2. Remove the 5 lug nuts securing each rear tire to the wheel spindle hub (Figure 1). Remove the tires.

5. Identify the left and right wheel motors. The wheel motor for the right side of the machine is identified with grooves in the outer surface of the motor housing. For further verification, the left motor can be identified by a small yellow sticker or paint mark on the motor housing.

- Mount the respective wheel motor assembly to each wheel housing with 4 bolts (1/2 x 2-1/4 inch) and lock washers (1/2 inch) (Figure 3). Torque the bolts to 95 to 108 N·m (70 to 80 ft-lb).

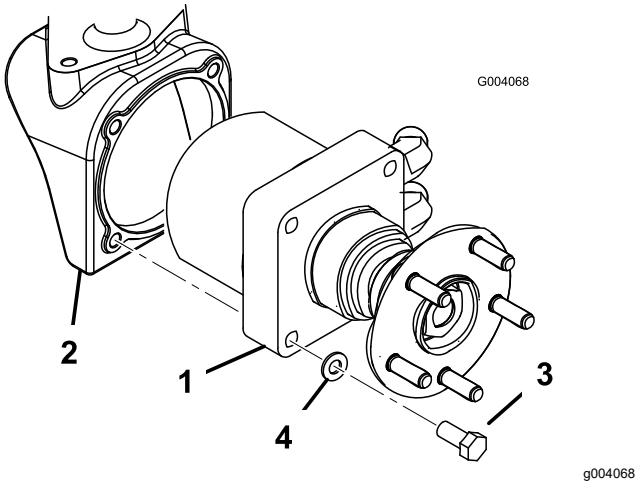


Figure 3

- | | |
|------------------|---------------------|
| 1. Wheel motor | 3. Wheel motor bolt |
| 2. Wheel housing | 4. Lock washer |

3

Installing the Manifold

Parts needed for this procedure:

1	Manifold
7	Hydraulic fitting, straight
2	Diagnostic fitting
2	Dust cap
3	Bolt (3/8 x 1-3/4 inches)
3	Lockwasher (3/8 inch)
3	Spacer

Procedure

- Install 4 straight hydraulic fittings into the rear of the manifold (Figure 4).

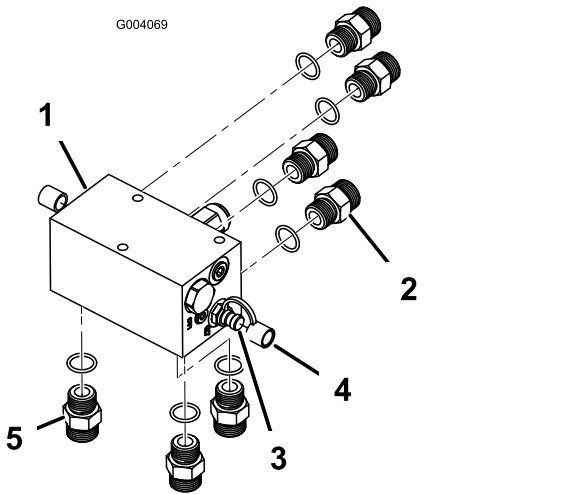


Figure 4

- | | |
|---------------------------------------|--|
| 1. Manifold | 4. Dust cap (2) |
| 2. Straight fitting, rear install (4) | 5. Straight fitting, underside install (3) |
| 3. Diagnostic fitting (2) | |

- Install 2 diagnostic fittings into either side of the manifold along with dust caps (Figure 4).
- Install 3 straight hydraulic fittings into the bottom of the manifold (Figure 4).
- Mount the manifold assembly to the underside of the manifold bracket with 3 bolts (3/8 x 1-3/4 inches), lock washers (3/8 inch) and spacers. Position the spacers between the manifold bracket and the top of the manifold. The manifold is to be positioned so the fittings point to the rear, and down (Figure 5).

Note: Make sure the O-rings are lubricated and in position on all of the fittings before installation.

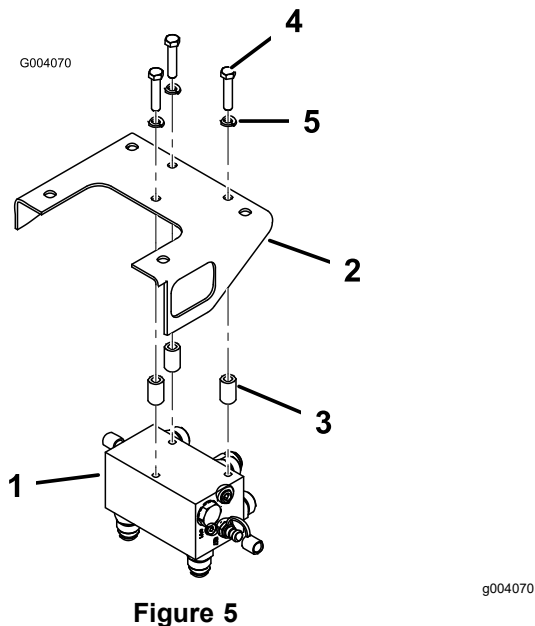


Figure 5

- | | |
|----------------------|------------------------------|
| 1. Manifold assembly | 4. Bolt (3/8 x 1-3/4 inches) |
| 2. Machine frame | 5. Lock washers (3/8 inch) |
| 3. Spacer | |

- Route the 2 left hoses to the left wheel motor. Connect the upper manifold hose to the upper wheel motor fitting and the lower manifold hose to the lower wheel motor fitting (Figure 7). If the hoses are not properly routed they may come in contact with the tires or rear bumper which will cause damage to the hoses.

Important: Do not cross the hydraulic hoses as they are routed from the manifold to the wheel motors.

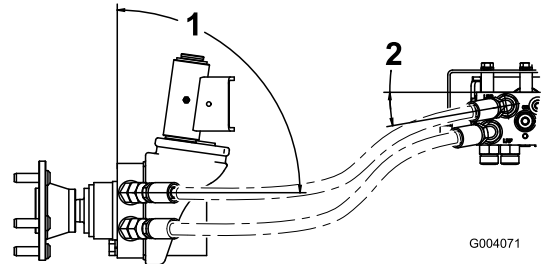


Figure 7

- | | |
|--------|--------|
| 1. 90° | 2. 10° |
|--------|--------|

- Repeat the procedure for the right wheel motor. Position the hoses as shown in Figure 8 and tighten all the hose fittings.

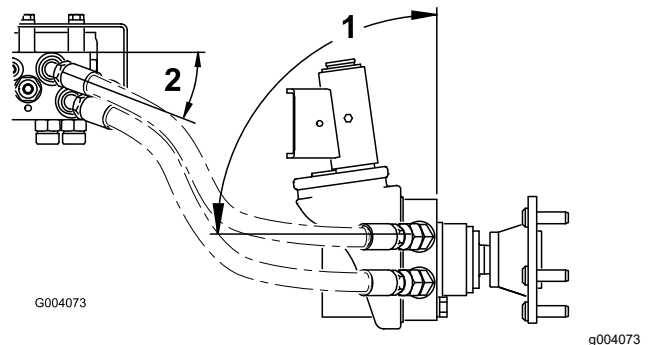


Figure 8

- | | |
|--------|--------|
| 1. 90° | 2. 10° |
|--------|--------|

- Reinstall the rear tires and torque the lug nuts to 115 to 135 N·m (85 to 100 ft-lb).

Important: Check the hose routing to ensure there is proper clearance when the axle is oscillated and when the steering wheel is operated in a full right and left lock turn. The minimum tire to axle clearance should be 1/2 inch (13 mm).

4

Installing the Wheel Motor Hoses

Parts needed for this procedure:

4	Hydraulic hose
---	----------------

Procedure

- Loosely thread the 45° fitting end of each hydraulic hose onto the straight fittings at the rear of the manifold (Figure 6).

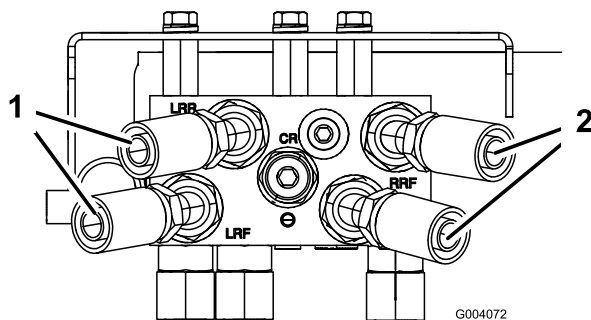


Figure 6

- | | |
|-------------------------|--------------------------|
| 1. Left fitting, at 10° | 2. Right fitting, at 10° |
|-------------------------|--------------------------|

5

Install the Manifold Tubes

Parts needed for this procedure:

1	Hydraulic tube, Part No. 108-7624
1	Hydraulic tube, Part No. 108-7625
1	Hydraulic tube, Part No. 108-7626
3	Bulkhead lock nut
2	Tube clamp halves
1	Cap screw (5/16 x 1-1/2 inches)
1	Flat washer (.344 x .688)
1	Lock nut (5/16 inch)

Procedure

1. Route the hydraulic tube, Part No. 108-7624, from the left manifold fitting labeled "RF" to the

right hole in the right frame bulkhead bracket (Figure 9).

2. Secure the rear of the hydraulic tube to the manifold fitting and the front to the bulkhead with a bulkhead locknut (Figure 9).
3. Route hydraulic tube, Part No. 108-7626, from the center manifold fitting labeled "REV" to the hole in the left frame bulkhead bracket (Figure 9).
4. Secure the rear of the hydraulic tube to the manifold fitting and the front to the bulkhead bracket with a bulkhead locknut.
5. Route hydraulic tube, Part No. 108-7625, from the right manifold fitting labeled "LF" to the left hole in the right frame bulkhead bracket (Figure 9).
6. Secure the rear of the hydraulic tube to the manifold fitting and the front to the bulkhead with a bulkhead locknut.
7. Secure the 2 right bulkhead lines together with the tube clamp halves, cap screw (5/16 x 1-1/2 inches), flat washer (.344 x .688) and a locknut (5/16 inch) (Figure 9).

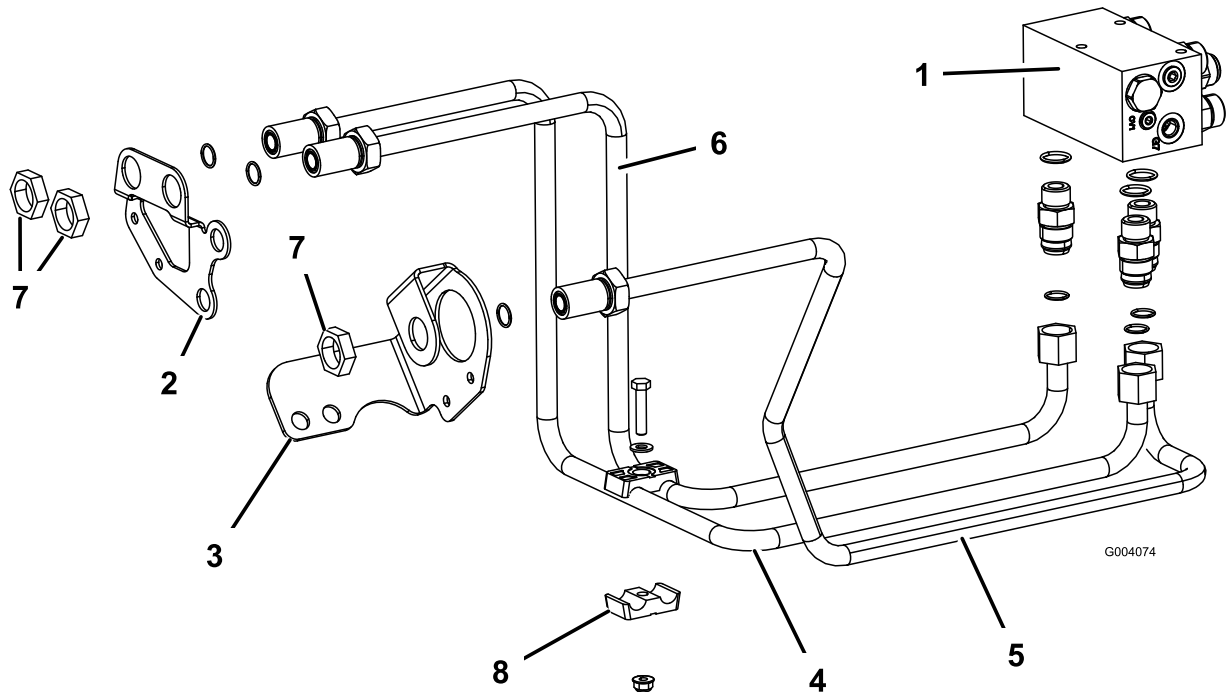


Figure 9

- | | | | |
|---------------------------------|--------------------------------------|--------------------------------------|-----------------|
| 1. Manifold | 3. Left frame bulkhead bracket | 5. Hydraulic tube, Part No. 108-7626 | 7. Bulkhead nut |
| 2. Right frame bulkhead bracket | 4. Hydraulic tube, Part No. 108-7624 | 6. Hydraulic tube, Part No. 108-7625 | 8. Tube clamp |

6

Remove the Front Tube and the Hydraulic Hose

No Parts Required

Procedure

1. Raise the front of the unit and support it on jack stands.

2. Remove the lug nuts securing the wheel assemblies and remove the wheels.
3. Remove the cap screws and nuts securing the wheel shields to the front axle flanges ([Figure 10](#)).
4. Disconnect the hydraulic tube from the top fitting on the front left wheel motor and the bottom fitting on the front right wheel motor ([Figure 10](#)).
5. Remove the R-clamps securing the tube to the frame ([Figure 10](#)) and the cable ties securing the brake cables to the hydraulic tubes.

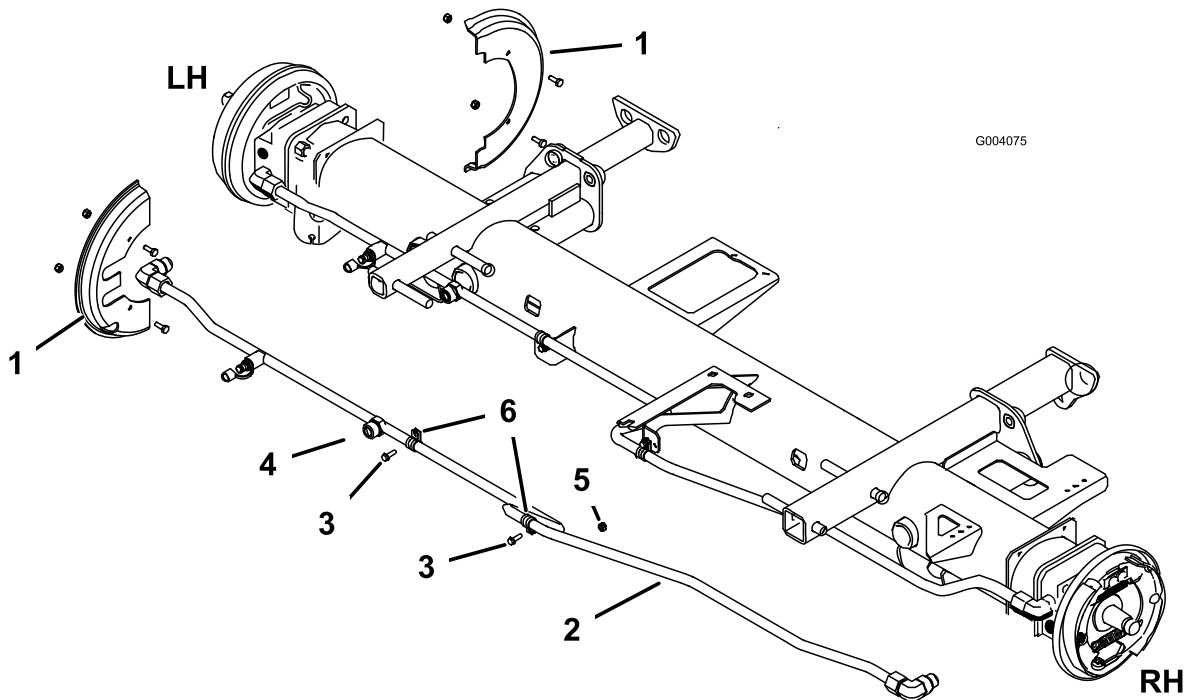


Figure 10

- | | | |
|-------------------|----------------------------|-------------|
| 1. Wheel shields | 3. Screw | 5. Lock nut |
| 2. Hydraulic tube | 4. Hose connection fitting | 6. R-clamp |

6. Disconnect the left hose from the variable pump and the hydraulic tube ([Figure 10](#)). Also, remove the 45° fitting from the bottom of the variable pump ([Figure 10](#)).

Note: The right hose can also be removed to improve clearance for the removal and installation of the front tube. This is not necessary but can aid in the installation of this kit.

7

Install the Front Tubes and the Hydraulic Hose

Parts needed for this procedure:

1	Hydraulic tube, Part No. 108-7622
1	Hydraulic tube, Part No. 108-7623
1	Hydraulic fitting, 90°
1	Hydraulic hose
3	Cable tie

Procedure

1. Connect hydraulic tube, Part No. 108-7622, to the right wheel motor fitting and to the right

hydraulic tube in the right frame bulkhead (Figure 11).

2. Connect hydraulic tube, Part No. 108-7623, to the left wheel motor fitting and to the left hydraulic tube in the right frame bulkhead (Figure 11).
3. Install a 90° hydraulic fitting into the bottom of the variable pump (Figure 11).
4. Connect the hydraulic hose to the left pump fitting and to the hydraulic tube at left frame bulkhead. If the right hose was removed, connect it at this time.
5. Secure the hydraulic hose to the bottom of the battery tray with a cable tie (Figure 11).
6. Install the wheel shields to the front axle flanges with the cap screws and nuts previously removed (Figure 10).
7. Install the cable ties to secure the brake cables to the hydraulic tubes.

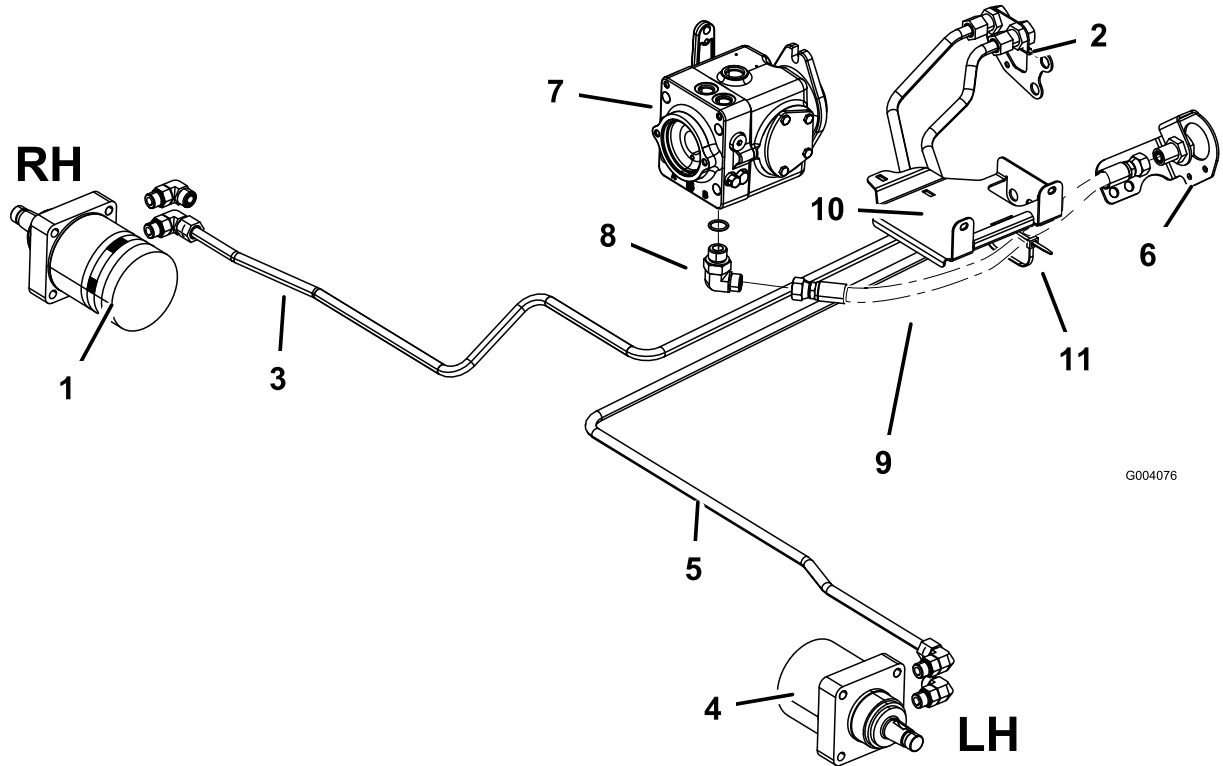


Figure 11

- | | | | |
|--------------------------------------|--------------------------------------|-------------------|------------------|
| 1. Right wheel motor | 4. Left wheel motor | 7. Variable pump | 10. Battery tray |
| 2. Right frame bulkhead | 5. Hydraulic tube, Part No. 108-7623 | 8. 90° fitting | 11. Cable tie |
| 3. Hydraulic tube, Part No. 108-7622 | 6. Left frame bulkhead | 9. Hydraulic hose | |

8

Check the Hydraulic Hoses and Tubes

No Parts Required

Procedure

Check the hydraulic tubes and hoses for leaks, loose fittings, kinked lines, and loose mounting supports. Make necessary repairs before operating.

Note: Keep areas around the hydraulic system clean from grass and debris build up.

⚠ WARNING

Hydraulic fluid escaping under pressure can penetrate skin and cause injury. Fluid accidentally injected into the skin must be surgically removed within a few hours by a doctor familiar with this form of injury or gangrene may result.

- Keep body and hands away from pin hole leaks or nozzles that eject high pressure hydraulic fluid.
- Use cardboard or paper to find hydraulic leaks.

1. Install the R-clamps removed previously using 2 screws and lock nuts to secure the hydraulic tubes to the machine frame shown in [Figure 12](#).

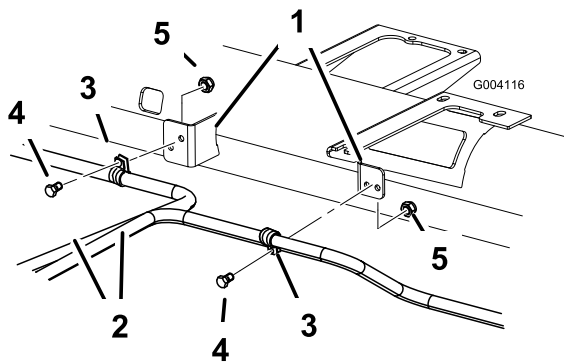


Figure 12

- | | |
|--------------------|-------------|
| 1. Machine frame | 4. Screw |
| 2. Hydraulic tubes | 5. Lock nut |
| 3. R-clamp | |

2. Install the front tires using the fasteners removed previously. Torque the lug nuts to 115 to 135 N·m (85 to 100 ft-lb).
3. Remove the machine from the jack stands and lower the unit to the floor.
4. Check the hydraulic oil level. If necessary, add fluid to the bring the level to the full mark on the dipstick. Refer to the *Operator's Manual* for more information.
5. Operate the machine to test for leaks. Shut down the machine as specified in the *Operator's Manual* and check for leaks in the hydraulic system.
6. Check the hydraulic oil level one more time. If necessary, add fluid to the bring the level to the full mark on the dipstick. Refer to the *Operator's Manual* for more information.

9

Install the Decals

Parts needed for this procedure:

2	Decal
1	Decal 110-8869, danger
1	Decal 110-8973, CE danger (Europe only)

Procedure

1. Install each decal at locations below as follows:
 - A. Thoroughly clean the area where you will install the decal.
 - B. Dampen the area with water or mildly soapy water.
 - C. Peel the decal from the backing and install it in place.
 - D. Squeegee across the surface of the decal, starting at the center of the decal and working toward the edges, using overlapping strokes.
2. Using the dimensions shown in [Figure 13](#), locate and affix a CROSSTRAX decal to the lower rear corner of each side of the hood.

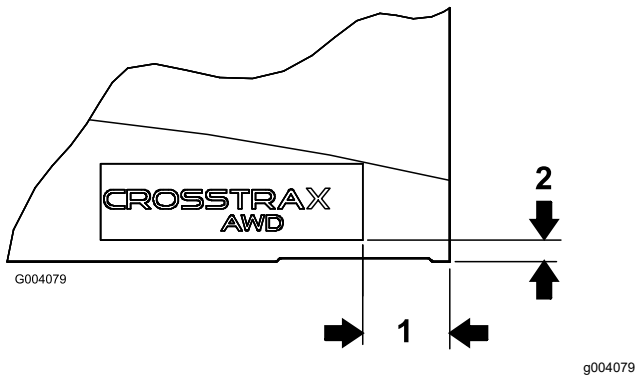


Figure 13

1. 4.00 inches
2. 1.00 inch

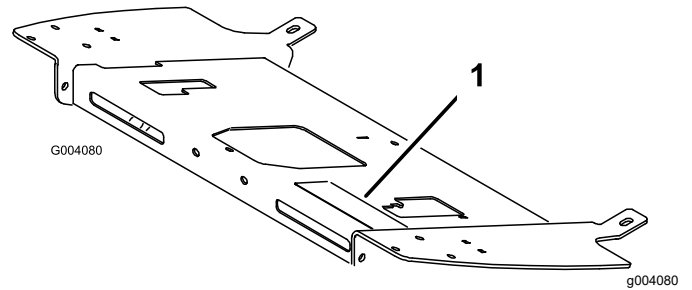


Figure 14

1. Danger decal

3. Affix the appropriate danger decal over the existing decal on the operator platform ([Figure 14](#)):
 - For domestic units apply decal 110-8869.
 - For CE (European) units apply decal 110-89673.

Declaration of Incorporation

The Toro Company, 8111 Lyndale Ave. South, Bloomington, MN, USA declares that the following unit(s) conform(s) to the directives listed, when installed in accordance with the accompanying instructions onto certain Toro models as indicated on the relevant Declarations of Conformity.

Model No.	Serial No.	Product Description	Invoice Description	General Description	Directive
03655	—	CrossTrax All-Wheel Drive Kit	CROSSTRAX AWD KIT [F15 AND NEWER]	CrossTrax All-Wheel Drive Kit	2000/14/EC and 2005/88/EC 2006/42/EC

Relevant technical documentation has been compiled as required per Part B of Annex VII of 2006/42/EC.

We will undertake to transmit, in response to requests by national authorities, relevant information on this partly completed machinery. The method of transmission shall be electronic transmittal.

This machinery shall not be put into service until incorporated into approved Toro models as indicated on the associated Declaration of Conformity and in accordance with all instructions, whereby it can be declared in conformity with all relevant Directives.

Certified:



Tom Langworthy
Engineering Director
8111 Lyndale Ave. South
Bloomington, MN 55420, USA
October 31, 2022

Authorized Representative:

Marcel Dutrieux
Manager European Product Integrity
Toro Europe NV
Nijverheidsstraat 5
2260 Oevel
Belgium

UK Declaration of Incorporation

The Toro Company, 8111 Lyndale Ave. South, Bloomington, MN, USA declares that the following unit(s) conform(s) to the regulations listed, when installed in accordance with the accompanying instructions onto certain Toro models as indicated on the relevant Declarations of Conformity.

Model No.	Serial No.	Product Description	Invoice Description	General Description	Regulation
03655	—	CrossTrax All-Wheel Drive Kit	CROSSTRAX AWD KIT [F15 AND NEWER]	CrossTrax All-Wheel Drive Kit	S.I. 2001 No. 1701 S.I. 2008 No. 1597

Relevant technical documentation has been compiled as required per Schedule 10 of S.I. 2008 No. 1597.

We will undertake to transmit, in response to requests by national authorities, relevant information on this partly completed machinery. The method of transmission shall be electronic transmittal.

This machinery shall not be put into service until incorporated into approved Toro models as indicated on the associated Declaration of Conformity and in accordance with all instructions, whereby it can be declared in conformity with all relevant Regulations.

This declaration has been issued under the sole responsibility of the manufacturer.
The object of the declaration is in conformity with relevant UK legislation.



Tom Langworthy
Engineering Director
8111 Lyndale Ave. South
Bloomington, MN 55420, USA
October 31, 2022

Authorized Representative:

Marcel Dutrieux
Manager European Product Integrity
Toro U.K. Limited
Spellbrook Lane West
Bishop's Stortford
CM23 4BU
United Kingdom