



Finishing Kit

Foam Marker for Serial Number 315000001 and After Multi Pro®
5800 Turf Sprayer

Model No. 136-0458

Installation Instructions

Installation

Loose Parts

Use the chart below to verify that all parts have been shipped.

Procedure	Description	Qty.	Use
1	No parts required	–	Prepare the machine.
2	Foam marker (sold separately) Support bracket Bolt (5/16 x 1 inch) Flanged locknut (5/16 inch) Washer (3/8 inch)	1 1 4 4 4	Assemble the foam marker.
3	Flanged locknut (5/16 inch) Carriage bolt (5/16 x 1-1/4 inch) R-clamp Bolt (3/8 inch) Nut (3/8 inch)	4 4 1 1 1	Install the finishing kit bracket.
4	Wire harness Cable tie	1 6	Route the wire harness.
5	Relay Flange-head bolt (#10-24 x 1/2 inch) Fuse (15 A)	1 1 1	Connect the wires.
6	Flange-head bolts (6 x 12 mm) Mounting bracket (foam-control switch) 3-position paddle switch (foam-control switch) 2-position rocker switch (compressor on/off switch)	2 1 1 1	Install the switches.
7	Valve mount Hex-slotted screw (1/4–20 x 1/2 inch) Flange-head screw (1/4–20 x 5/8 inch) Flange nut (1/4 inch)	1 2 2 2	Install the valve mount.
8	No parts required	–	Finish the installation of the kit.

Note: The Foam Marker Kit is required to install this product. Contact your Authorized Toro Dealer for more information.



1

Preparing the Machine

No Parts Required

Procedure

⚠ WARNING

Incorrect battery cable routing could damage the sprayer and cables, causing sparks. Sparks can cause the battery gasses to explode, resulting in personal injury.

- Always disconnect the negative (black) battery cable before disconnecting the positive (red) cable.
- Always reconnect the positive (red) battery cable before reconnecting the negative (black) cable.

⚠ WARNING

Battery terminals or metal tools could short against metal sprayer components, causing sparks. Sparks can cause the battery gasses to explode, resulting in personal injury.

- When removing or installing the battery, do not allow the battery terminals to touch any metal parts of the sprayer.
 - Do not allow metal tools to short between the battery terminals and metal parts of the sprayer.
 - Always keep the battery strap in place to protect and secure the battery.
1. Park the machine on a level surface.
 2. Engage the parking brake.
 3. Shut off the engine and remove the key.
 4. Remove the battery cover and disconnect the negative (black—ground) cable from the battery post (Figure 1 and Figure 2).

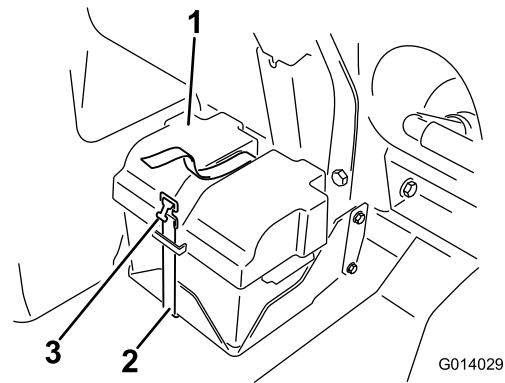


Figure 1

- | | |
|------------------|-----------|
| 1. Battery cover | 3. Buckle |
| 2. Strap | |

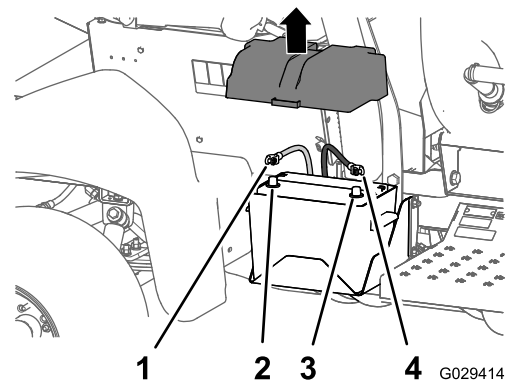


Figure 2

- | | |
|---------------------------|---------------------------|
| 1. Positive battery cable | 3. Negative battery post |
| 2. Positive battery post | 4. Negative battery cable |

5. Disconnect the positive (red) cable from the battery post (Figure 2).
6. Tilt both seats forward and secure them by moving the prop rods into the detents at the end of the slots at the center-console base.

2

Assembling the Foam Marker

Parts needed for this procedure:

1	Foam marker (sold separately)
1	Support bracket
4	Bolt (5/16 x 1 inch)
4	Flanged locknut (5/16 inch)
4	Washer (3/8 inch)

Procedure

Note: The foam marker is sold separately.

1. Align the foam marker tank and compressor to the mounting bracket as shown in [Figure 3](#).

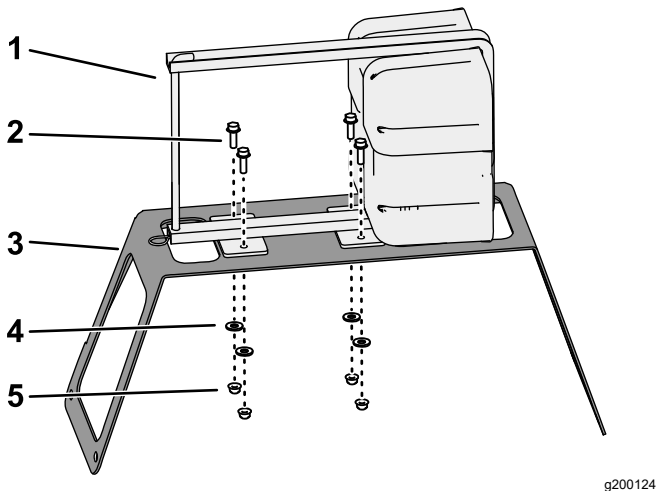


Figure 3

1. Foam-marker tank and compressor (sold separately)
2. Bolts (5/16 x 1 inch)
3. Support bracket
4. Washers (3/8 inch)
5. Flanged locknuts (5/16 inch)

2. Secure the compressor to the bracket ([Figure 3](#)) using the 4 bolts (5/16 x 1 inch), 4 washers (3/8 inch), and 4 flanged locknuts (5/16 inch).
3. Install the foam marker tank onto the foam marker compressor; refer to the *Installation Instructions* for the foam marker kit.

3

Installing the Foam Marker and Support Bracket

Parts needed for this procedure:

4	Flanged locknut (5/16 inch)
4	Carriage bolt (5/16 x 1-1/4 inch)
1	R-clamp
1	Bolt (3/8 inch)
1	Nut (3/8 inch)

Procedure

1. Remove the 2 carriage bolts and 2 flanged locknuts that secure the right, rear fender to the forward-fender bracket ([Figure 4](#))


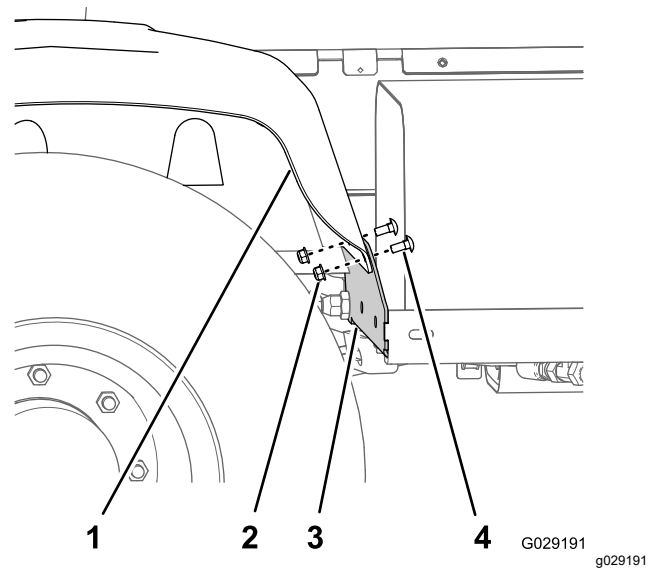


Figure 4

1. Right, rear fender
2. Flanged locknut
3. Forward-fender bracket
4. Carriage bolt

2. Remove the 2 carriage bolts and 2 flanged locknuts that secure the splash guard to the rear-fender mount and right, rear fender ([Figure 5](#)).

Note: Discard the old carriage bolts and nuts.

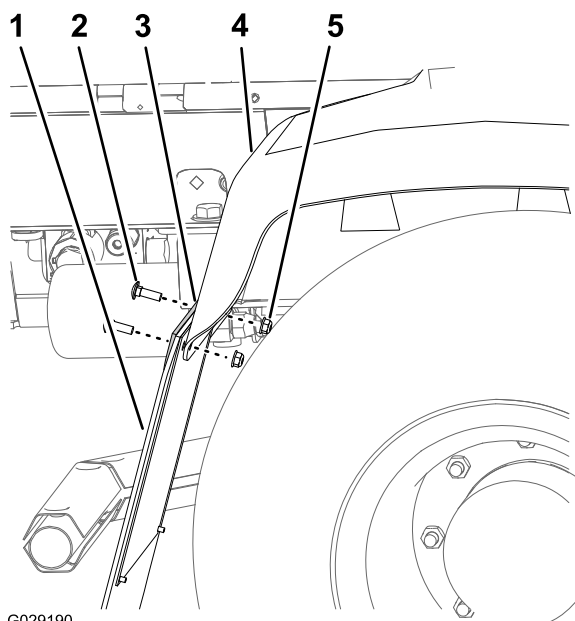


G029190

g029190

Figure 5

1. Splash guard
2. Carriage bolt
3. Rear-fender mount
4. Right, rear fender
5. Flanged locknut


6. Secure the support bracket to the splash guard, fender bracket, and fender with 2 carriage bolts (5/16 x 1-1/4 inch) and 2 flanged locknuts (5/16 inch) as shown in [Figure 6](#).
7. If the machine has a rinse kit installed, secure the rinse-kit hose with the R-clamp as shown [Figure 7](#).

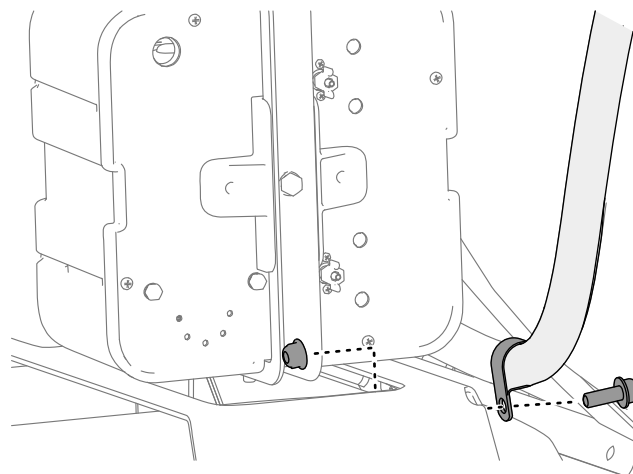

g200877

Figure 7

3. Align the holes in the front leg of the support bracket with the holes in the fender bracket and fender ([Figure 6](#)).

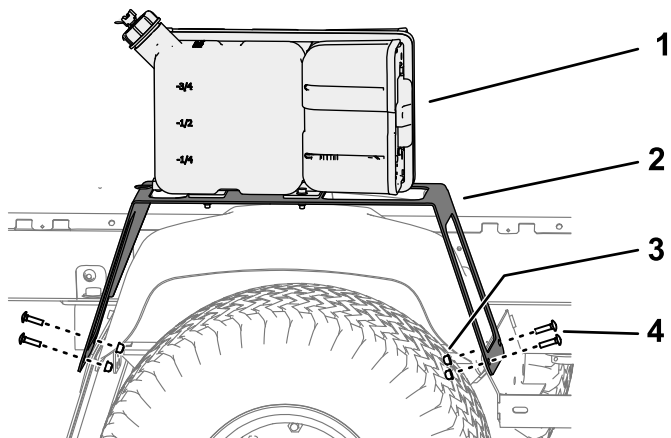

g200123

Figure 6

1. Foam-marker tank
2. Bracket
3. Flanged locknut (5/16 inch)
4. Carriage bolt (5/16 x 1-1/4 inch)

4. Secure the support bracket to the fender bracket and fender with 2 carriage bolts (5/16 x 1-1/4 inch) and 2 flanged locknuts (5/16 inch) as shown in [Figure 6](#).
5. Align the holes in the rear leg of the support bracket with the holes in the splash guard, fender bracket, and fender ([Figure 6](#)).


4

Routing the Wire Harness

Parts needed for this procedure:

1	Wire harness
6	Cable tie

Routing the Compressor Branch of the Wire Harness

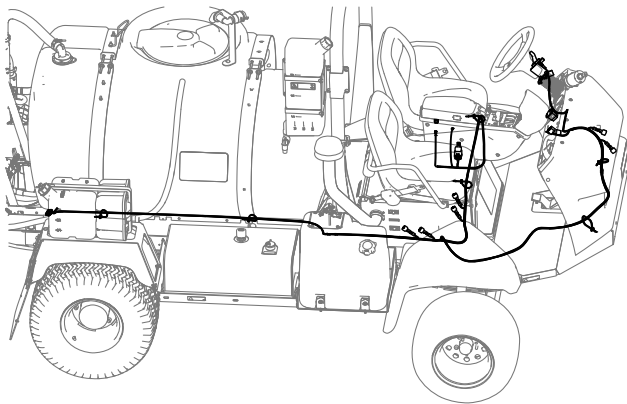


g200878

Figure 8

Wire harness overview

1. Locate the 236 cm (93 inch)—compressor branch of the wire harness with a 4-socket connector and route the wire branch rearward along the sprayer tank as shown in [Figure 8](#) and [Figure 9](#).

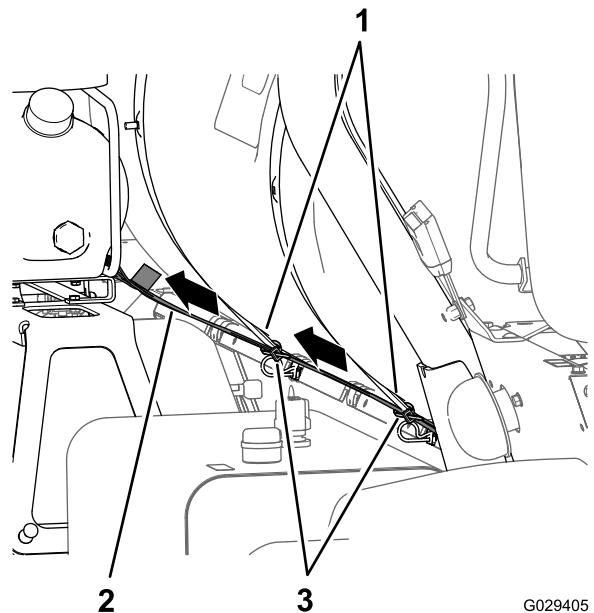

G029405
g029405


Figure 9

1. Sprayer-tank straps
2. 236 cm (93 inch)—compressor branch
3. Cable ties

2. Route the 4-socket connector of the harness to the 4-pin connector of the compressor and connect the 2 connectors.

Routing the Engine-Compartment Branch of the Wire Harness

1. Route the wire harness for the finishing kit forward between the ROPS bar and the lower corner of the sprayer tank, along the wire harness of the machine, and below the air cleaner for the engine ([Figure 10](#) and [Figure 11](#)).

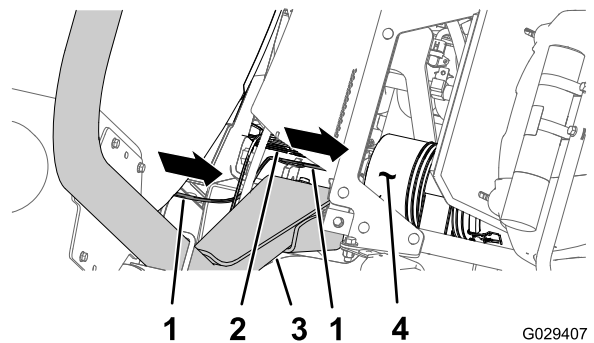

G029407
g029407

Figure 10

1. 236 cm (93 inch)—compressor branch
2. Wire harness for the machine
3. ROPS
4. Air cleaner (engine)

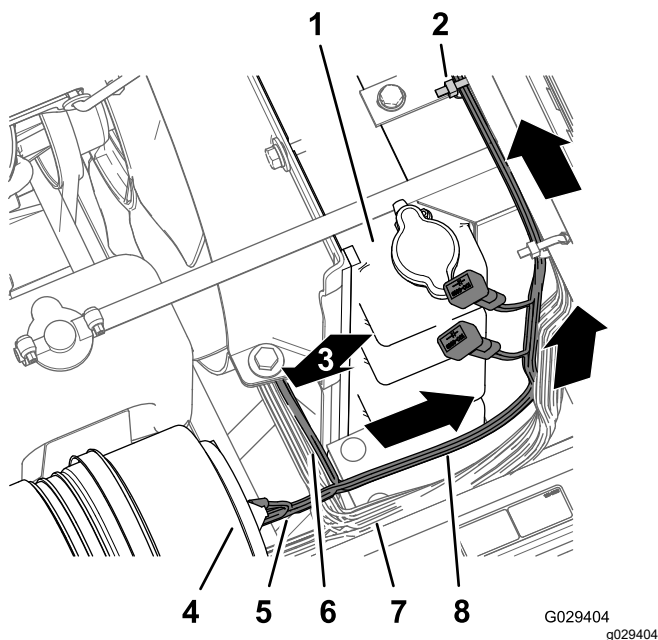


Figure 11

- | | |
|---|---|
| 1. Radiator | 5. 236 cm (93 inch)—compressor branch |
| 2. Cable tie | 6. 240 cm (94-1/2 inch)—dash-panel branch |
| 3. 240 cm (94-1/2 inch)—dash-panel branch (routed down) | 7. Wire harness for the machine |
| 4. Air filter (engine) | 8. 197 cm (77-1/2 inch)—engine-compartment branch |

- Route the 197 cm (77-1/2 inch)—engine-compartment branch of the wire harness (with the ring terminal, socket terminal, and 5-socket connector) up along the right side of the radiator, across the top of the radiator, and under the base of the center console ([Figure 11](#)).
- Route the 197 cm (77-1/2 inch)—engine-compartment branch of the wire harness down along the left side of the radiator and across the bottom of the electrical panel ([Figure 12](#)).

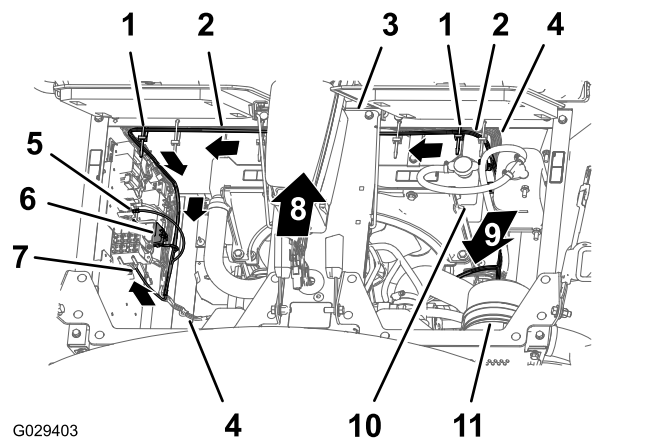


Figure 12

- | | |
|--|---|
| 1. Cable ties | 7. Blade connector (wire harness for the finishing kit) |
| 2. 197 cm (77-1/2 inch)—engine-compartment branch | 8. Front of the machine |
| 3. Base of the center console | 9. 240 cm (94-1/2 inch)—dash-panel branch (routed down) |
| 4. Wire harness for the machine | 10. Radiator |
| 5. Ring terminal (wire harness for the finishing kit) | 11. Air filter |
| 6. 5-socket connect (wire harness for the finishing kit) | |

- Secure the wire harness for the finishing kit to the wire harness for the machine with 2 cable ties as shown in [Figure 12](#).

Routing the Dash-Panel Branch of the Wire Harness

- Route the 240 cm (94-1/2 inch)—dash-panel branch of the wire harness along the wire harness and steering hoses of the machine (below the radiator), through the R-clamp at the bottom of the radiator support, through the R-clamp at the ground-speed-control coil ([Figure 13](#) and [Figure 14](#)).

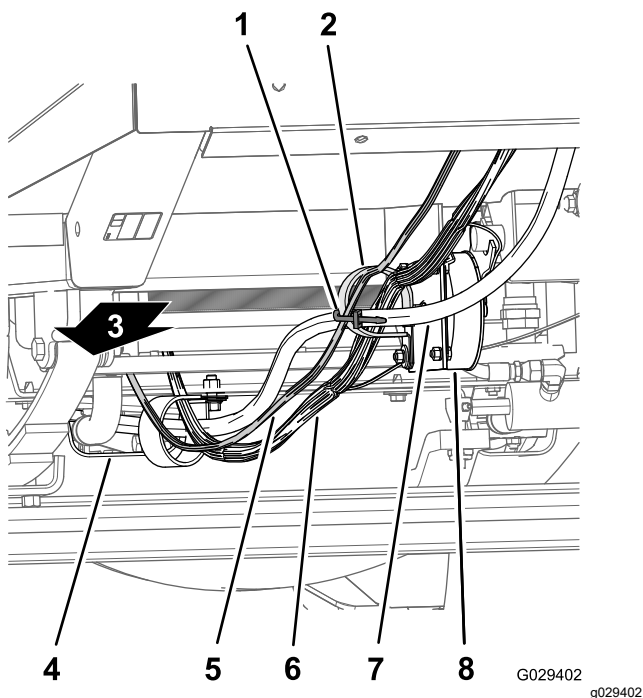


Figure 13

- | | |
|------------------------|---|
| 1. Cable tie | 5. 240 cm (94-1/2 inch)—dash-panel branch |
| 2. R-clamps | 6. Wire harness for the machine |
| 3. Back of the machine | 7. Steering hose |
| 4. Engine-heat shield | 8. Ground-speed-control coil |

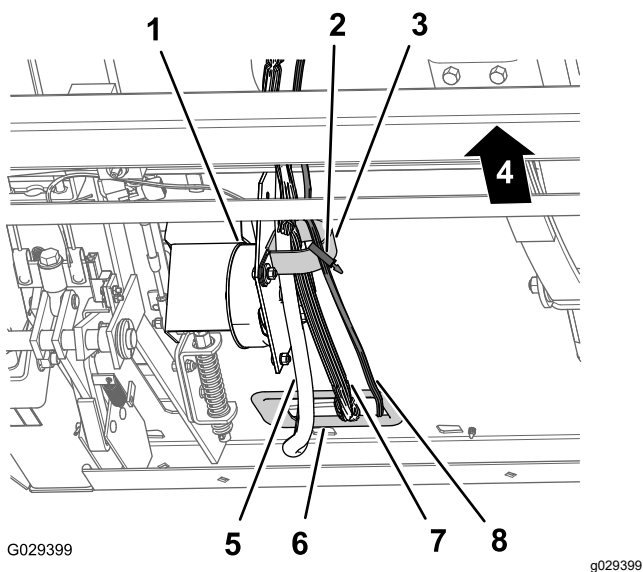


Figure 14

- | | |
|------------------------------|---|
| 1. Ground-speed-control coil | 5. Steering hose |
| 2. Cable tie | 6. Grommet (forward bulkhead) |
| 3. R-clamp | 7. Wire harness for the machine |
| 4. Front of the machine | 8. 240 cm (94-1/2 inch)—dash-panel branch |

2. Route the 240 cm (94-1/2 inch)—dash-panel branch of the wire harness to the R-clamp at the ground-speed-control coil (Figure 13 and Figure 14).
3. Route the 240 cm (94-1/2 inch)—dash-panel branch of the wire harness through the grommet at the opening in the forward bulkhead and inboard of the cable and hose hook (Figure 15).

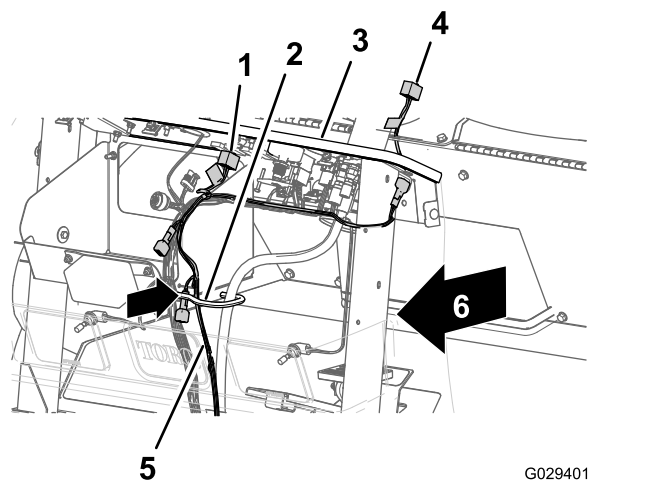


Figure 15

- | | |
|---|--|
| 1. 8-socket connector (compressor switch) | 4. 8-socket connector (wire harness for the finishing kit) |
| 2. Cable and hose hook | 5. 240 cm (94-1/2 inch)—dash-panel branch |
| 3. Dash panel | 6. Front of machine |

4. Route the 8-socket connector at the end of the 240 cm (94-1/2 inch)—dash-panel branch across the dash panel and to the left of the steering column (Figure 16).

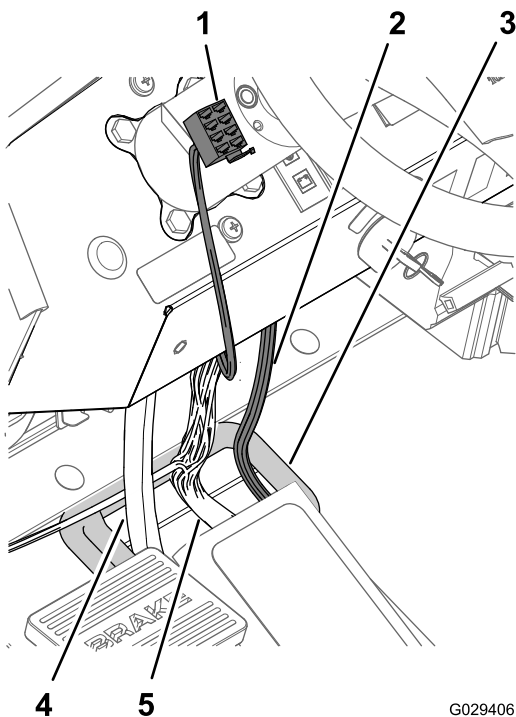


Figure 16

G029406

g029406

1. 8-socket connector (wire harness for the finishing kit)
 2. 240 cm (94-1/2 inch)—dash-panel branch
 3. Grommet (forward bulkhead)
 4. Steering hose
 5. Wire harness for the machine
-
5. Adjacent to the cable and hose hook, secure the 240 cm (94-1/2 inch)—dash-panel branch to the wire harness for the machine with a cable tie (Figure 17).

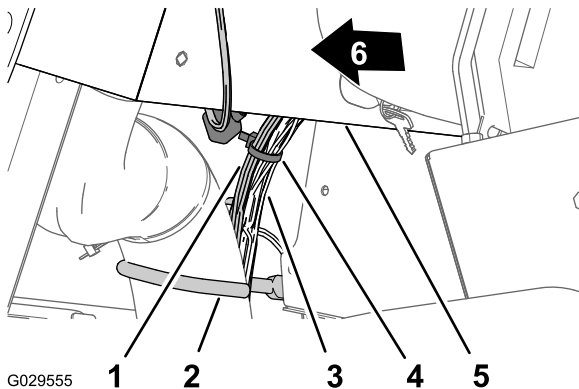


Figure 17

G029555

g029555

1. 240 cm (94-1/2 inch)—dash-panel branch
2. Cable and hose hook
3. Wire harness for the machine
4. Cable tie
5. Dash panel
6. Front of the machine

5

Connecting the Wires

Parts needed for this procedure:

1	Relay
1	Flange-head bolt (#10-24 x 1/2 inch)
1	Fuse (15 A)

Connecting the Compressor Wire

1. At the end of the 236 cm (93 inch) branch of the wire harness, align the 4-socket connector of the wire harness for the finishing kit with the 4-pin connector of the wire harness from the compressor.

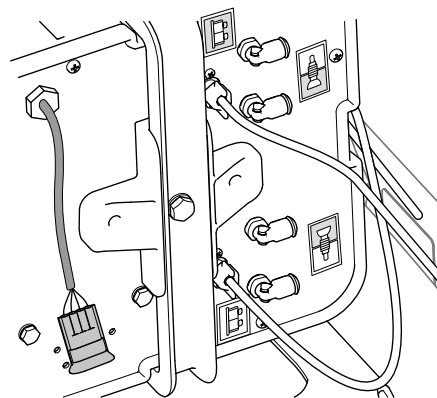


Figure 18

g200879

2. Insert the 4-pin connector into the 4-socket connector.

Note: Press the connectors together until the latch snaps securely.

Installing the Relay, Fuse, and Ground Wire

1. At the 197 cm (77-1/2 inch)—engine-compartment branch of the wire harness, align the relay with the 5-socket connect of the wire harness for the finishing kit (Figure 19).

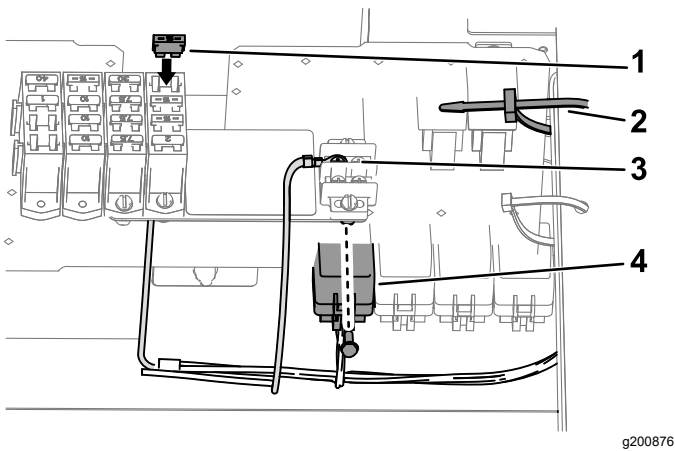


Figure 19

- | | |
|--------------|----------------|
| 1. Fuse | 3. Ground wire |
| 2. Cable tie | 4. Relay |

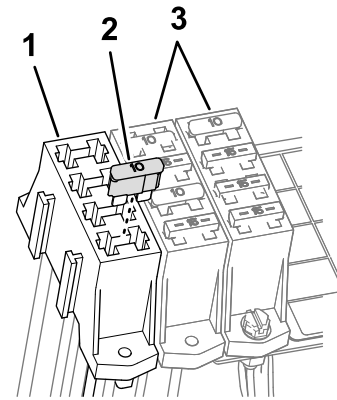


Figure 20

- | | |
|-------------------------|--------------------------------|
| 1. Auxiliary-fuse block | 3. Fuse blocks for the machine |
| 2. Fuse | |

- Insert the pins of the relay into the sockets of the connector (Figure 19).

Note: Press the relay and connector together until the latch snaps securely.

- Align the hole in the mounting tab of the relay with the hole in the wire panel (Figure 19).
- Secure the relay to the panel (Figure 19) with the flange-head bolt (#10-24 x 1/2 inch).
- Remove a screw from the ground-terminal block (Figure 19).
- Secure the ring terminal of the wire harness for the finishing kit to the ground-terminal block with the screw.

Install the Fuse

- For a machine with the bladed-attachment connector at the fuse block for the machine, install the fuse into the fuse block (Figure 19).

Note: Ensure that the fuse is fully seated into the socket of the fuse block

- For a machine with a bladed-attachment connector at the optional auxiliary-fuse block, perform the following:

- Locate the fuse socket that is aligned with the wire of the blade connector.
- Install the fuse into the socket that located in the auxiliary-fuse block (Figure 20).

Note: Ensure that the fuse is fully seated into the socket of the fuse block.

Connecting the Load Wire Connectors (Machine-Fuse Block)

Note: If you do not have a bladed-attachment connector at the fuse block for the machine available, you will need to install an auxiliary-fuse block.

- For a machine with the bladed-attachment connector at the fuse block for the machine, connect the blade connector of the wire harness for the finishing kit to the socket connector of the fuse block for the machine (Figure 21).

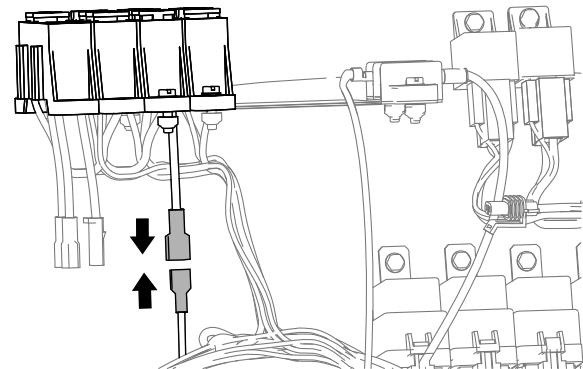


Figure 21

- Press the connectors together until the latch snaps securely.

Connecting the Load Wire Connectors (Optional Auxiliary-Fuse Block)

- 1. Connect the blade connector of the wire harness for the finishing kit to the socket connector of the auxiliary-fuse block (Figure 22).

Note: Press the connectors together until the latch snaps securely.

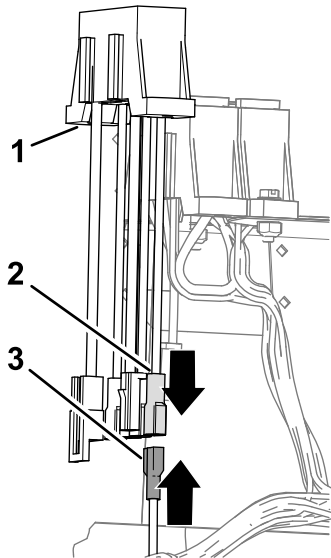


Figure 22

- 1. Auxiliary fuse block
- 2. Socket connector (auxiliary-fuse block)
- 3. Blade connector (wire harness for the finishing kit)

- 2. Connect the 2-pin connector for the auxiliary-feed wires of the fuse block for the machine to the 2-socket connector for the feed wires of the auxiliary-fuse block (Figure 23).

Note: Press the connectors together until the latch snaps securely.

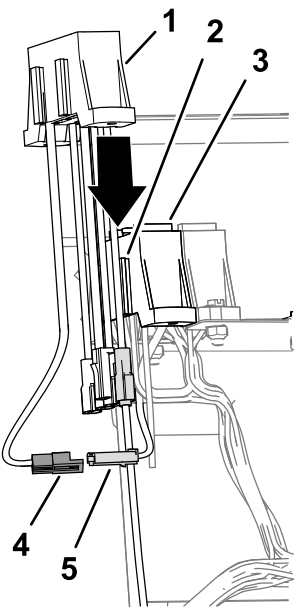


Figure 23

- 1. Auxiliary fuse block
 - 2. Mounting flange (fuse block for the machine)
 - 3. Fuse block (machine)
 - 4. 2-socket connector (feed wires of the auxiliary-fuse block)
 - 5. 2-pin connector (auxiliary-feed wires, fuse block for the machine)
- 3. Align the slots in the auxiliary-fuse block with the mounting flanges of the fuse block for the machine (Figure 23).
 - 4. Assemble the fuse blocks together.

6

Installing the Switches

Parts needed for this procedure:

2	Flange-head bolts (6 x 12 mm)
1	Mounting bracket (foam-control switch)
1	3-position paddle switch (foam-control switch)
1	2-position rocker switch (compressor on/off switch)

Installing the Foam-Control Switch

- 1. Assemble the bracket to the column with the 2 flange-head bolts (6 x 12 mm) and torque the bolts to 972 to 1198 N-cm (86 to 106 in-lb).

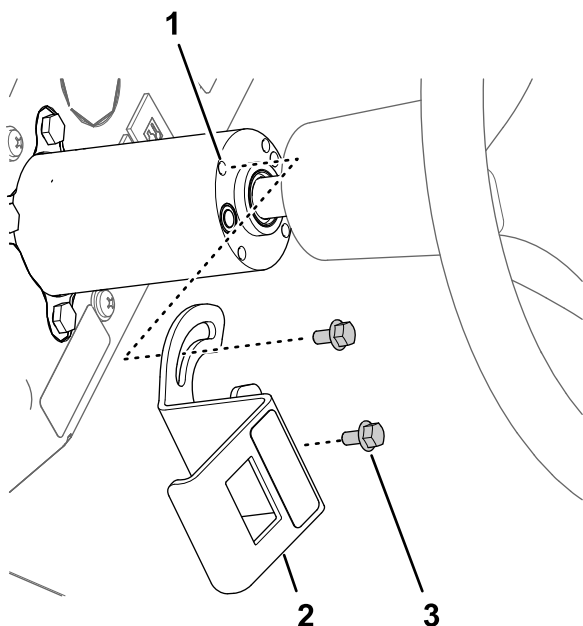


Figure 24

g422055

1. Threaded inserts (steering column)
2. Mounting bracket (foam-control switch)
3. Flange-head bolts (6 x 12 mm)

2. Assemble the switch into the bracket and press in the switch until it snaps securely into the opening.

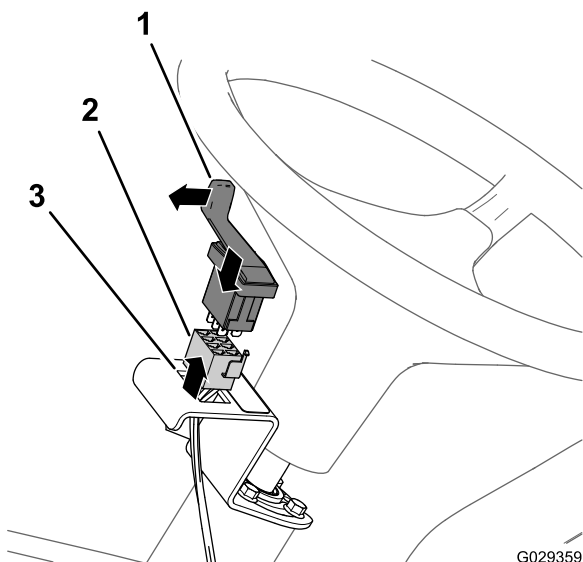


Figure 25

G029359
g029359

1. 3-position paddle switch (foam-control switch)
2. 8-socket connector
3. Opening (mounting bracket for the foam-control switch)

Note: Ensure that the paddle for the 3-position paddle switch (foam-control switch) is aligned outward.

Installing the Compressor Switch

1. Remove the plug in the dash panel of the machine (Figure 26).

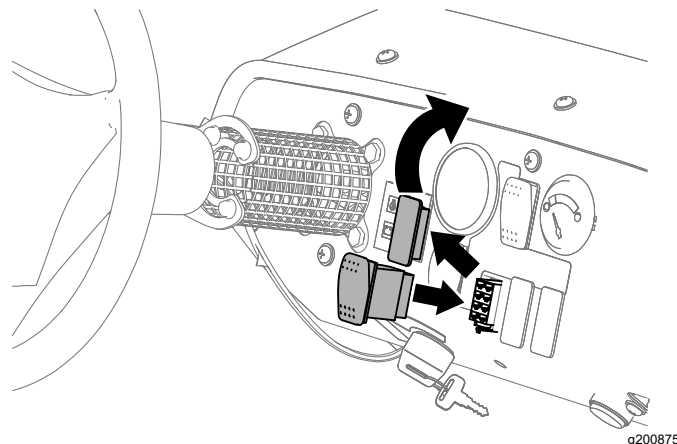


Figure 26

g200875

2. Align the 8-socket connector through the opening in the dash panel and connect the connector to the pins at the back of the 2-position rocker switch (compressor on/off switch).
3. Assemble the switch into the dash panel and press in the switch until it snaps securely into the opening (Figure 26).

7

Installing the Valve Mount

Parts needed for this procedure:

1	Valve mount
2	Hex-slotted screw (1/4–20 x 1/2 inch)
2	Flange-head screw (1/4–20 x 5/8 inch)
2	Flange nut (1/4 inch)


Installing the Valve Mount to Model Year 2015 and Earlier Machines

1. From the bolt on the seat base, measure and drill 2 holes into the seat base (Figure 27).

Installing the Valve Mount to Model Year 2016 and Later Machines

1. Remove the harness base from the console by loosening and removing the bolts from the harness base (Figure 29).

Note: Retain and set aside the bolts.

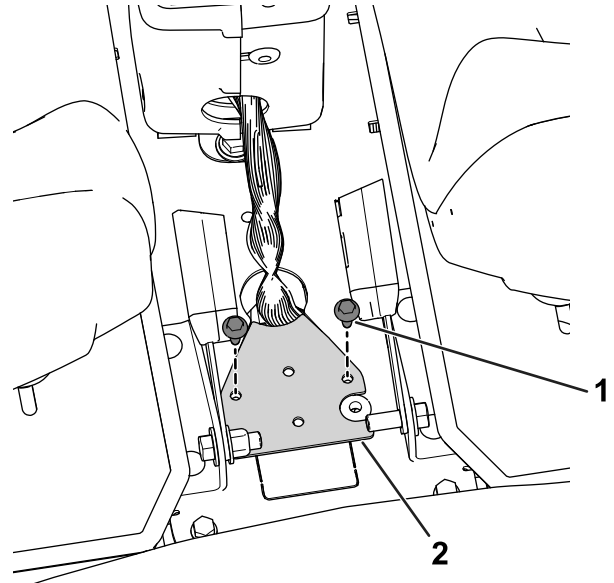


g206714

Figure 29

1. Bolt
2. Harness base

2. Use 2 flange-head screws (1/4–20 x 5/8 inch) and 2 flange nuts (1/4 inch) secure the valve mount to the harness base (Figure 30).

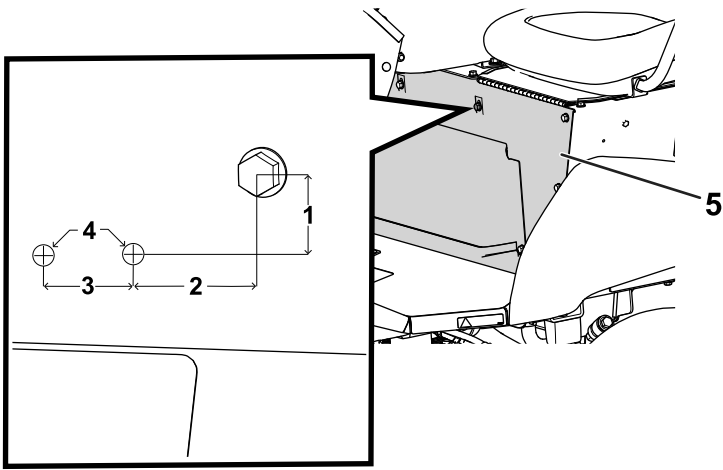


g206707

Figure 27

1. 3.8 cm (1.5 inches)
2. 4.1 cm (1.625 inches)
3. 3.2 cm (1.25 inches)
4. Drill hole—1/4 inch diameter
5. Seat base

2. Use 2 hex-slotted screws (1/4–20 x 1/2 inch) to secure the valve mount to the seat base (Figure 28).

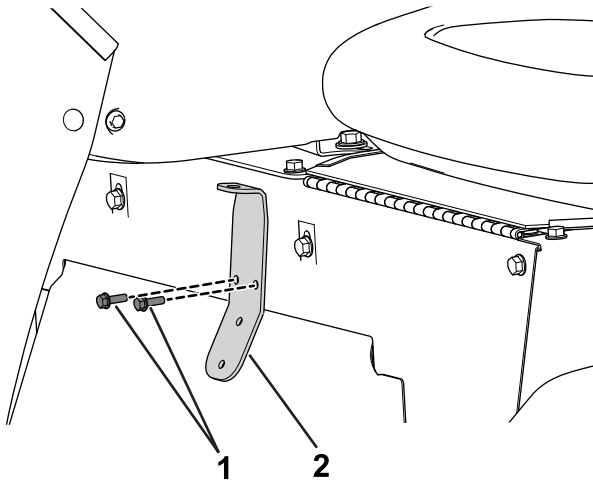

g206708

Figure 28

1. Hex-slotted screw (1/4–20 x 1/2 inch)
2. Valve mount

8

Finishing the Installation of the Kit

No Parts Required

Procedure

1. Move the prop rod for the seats into the slots and tilt the seats down.
2. Connect the positive (red) cable to the positive (+) battery post and the negative (black) cable to the negative (-) battery post using the bolts and nuts. Slide the insulator boot over both battery posts (Figure 2).
3. Install the battery cover and secure it with the strap (Figure 1) that you removed in 1 Preparing the Machine (page 2).

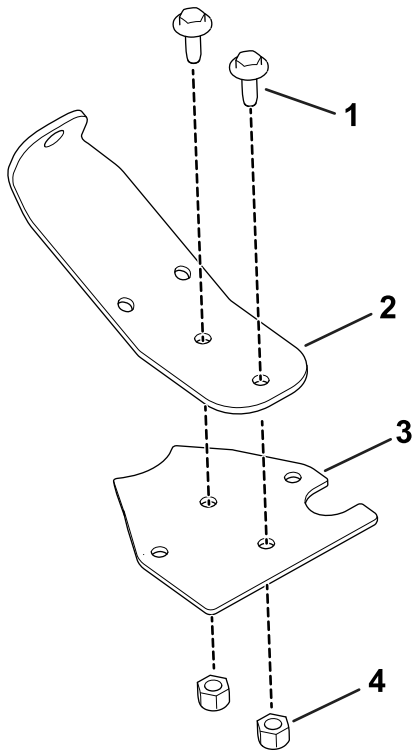


Figure 30

g206715

1. Flange-head screws (1/4–20 x 5/8 inch)
2. Valve mount
3. Harness base
4. Flange nuts (1/4 inch)

3. Use the previously removed bolts to secure the harness base to the console (Figure 31).

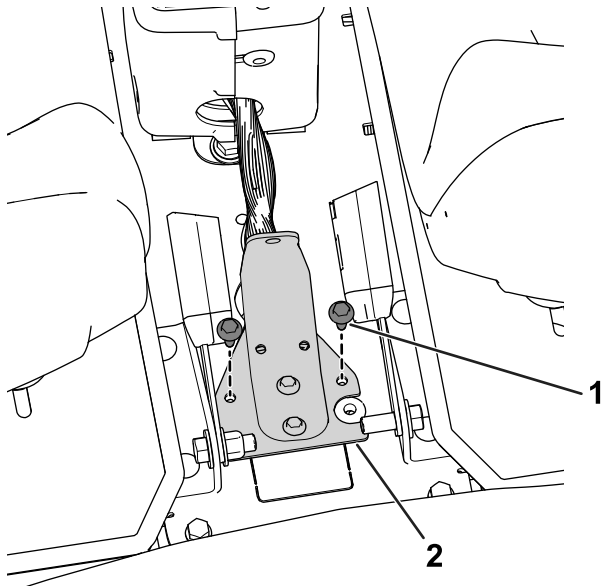


Figure 31

g206713

1. Bolt
2. Harness base

Operation


Using the Controls

- COMPRESSOR ON/OFF switch—Use this switch to run the compressor for the foam marker system.
- FOAM-CONTROL switch—Use this switch to control which boom from which foam flows.
 - Move the paddle **down** to apply foam from the left-boom section.
 - Move the paddle to the **center** position apply foam from the left- and right-boom sections.
 - Move the paddle **up** to apply foam from the right-boom section.
- Indicator markings—The indicator markings are located at the side of the tank and indicate the solution level in the tank.
- Foam-regulator valve—This valve controls the consistency of the foam solution. Adjusting the valve controls the amount of soap solution delivered to the foam nozzles. Increasing the flow results in larger, more frequent foam drops; decreasing the flow results in smaller, less frequent foam drops (Figure 32).

Note: A watery marker consistency may be helpful on windy days.

- Pressure relief valve—Pull the red tab on the tank cap outward to relieve pressure in the tank (Figure 32).

Note: During compressor operation, the pressure-relief valve continuously opens/closes to maintain tank pressure; it is normal to see foam-marker solution and bubbles around the pressure-relief valve. Clean the pressure-relief valve periodically to maintain proper function of the valve.

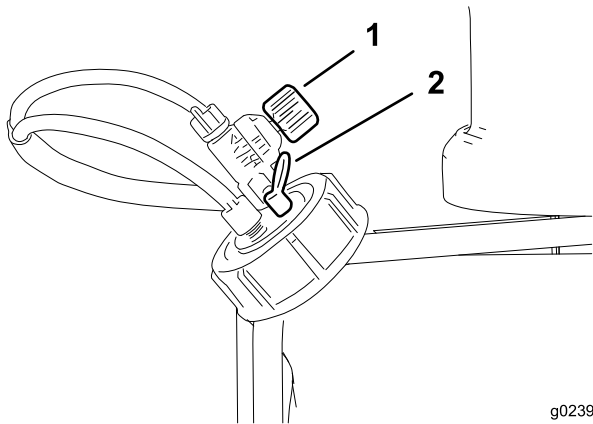

g023901
g023901

Figure 32

1. Foam regulator adjustment valve
 2. Pressure-relief valve
-

Notes:



Count on it.