



Beacon Kit

LT3240 Mower

Model No. 02848

Form No. 3368-280 Rev A

Installation Instructions

Installation

1. Park the machine on a level surface, stop the engine, engage the parking brake, lower the cutting units and remove the key from the ignition switch.
2. Disconnect the negative (–) battery lead first and then disconnect the positive (+) battery lead.

⚠ WARNING

Wear safety goggles and rubber gloves when working with batteries. Since the gases are explosive, keep open flames and electrical spark away from batteries. Do not smoke.

3. Disconnect at one end the cable stay located on the rear cover.
4. Identify and unscrew the 2 engine cover/rear screen assembly pivot bolts and remove the engine cover/rear screen assembly from the machine. Refer to the LT3240 Parts List and *Operator Manual* as appropriate.

⚠ WARNING

The engine cover is made from glass reinforced plastic, always wear eye and mouth protection to prevent glass particles, which are created when drilling/machining the material, from coming into contact with eyes or from being ingested. If swallowed seek medical attention. In the event of contact with eyes, wash with running water and seek medical attention if symptoms persist.

5. Align the hole template (Figure 5) on the engine cover and drill the holes shown (Figure 1).

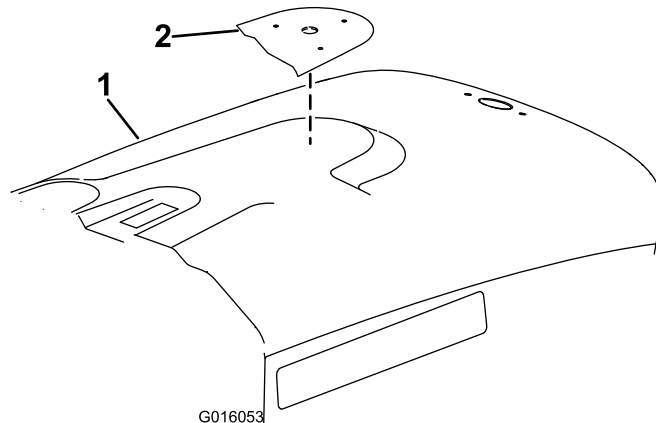


Figure 1

1. Engine cover
2. Template

6. Reassemble the engine cover/rear screen assembly to the machine.
7. Raise the front platform to gain access to the control panel electrical connections.
8. Remove one of the blanking plugs behind the parking lever. Push the beacon switch into position (Figure 2).

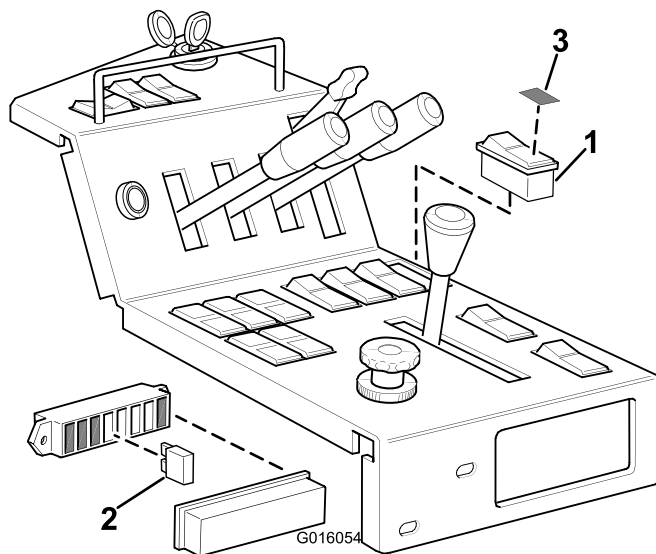


Figure 2

1. Beacon switch
2. Fuse
3. Lens

9. Remove the fuse box cover and connect the 5A fuse next to the 3A fuse (Figure 2).
10. From the existing loom, connect the orange wire terminal to the beacon switch no. 5 and the red/orange wire terminal to terminal no. 1.
11. To assemble the beacon loom, fit the grommet over the bullet onto cable. Route the cable as shown in Figure 4.
12. Secure the beacon to the engine cover using the fasteners supplied. Ensure the “P” clip is fixed around the loom and to one of the securing screws (Figure 3).
17. Lower the front platform and engine cover and re-secure.
18. Verify the kit is working properly. Press the rocker switch to turn the beacon on.

Note: Ensure the platform fasteners are torqued to 40 N-m. Refer to the LT3240 *Operator Manual*.

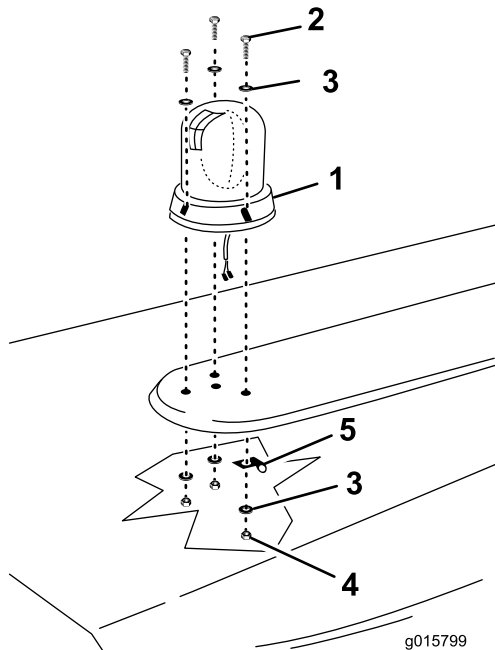


Figure 3

- | | |
|--------------|-------------|
| 1. Beacon | 4. Nuts |
| 2. Setscrews | 5. “P” clip |
| 3. Washers | |

13. Connect the loom terminals to the beacon terminals.
 14. Locate the 2 pin socket on the existing loom through the aperture in rear of chassis and connect to the beacon loom.
- Note:** On LT3240 machines, the rear guard plate may be removed to gain access. Take care not to disconnect the wires from the 4WD valve block.
15. Reconnect the positive (+) battery lead first and then reconnect the negative (–) battery lead
 16. Rotate the ignition to the “I” position, depress the beacon switch and check that the beacon light rotates and flashes correctly.

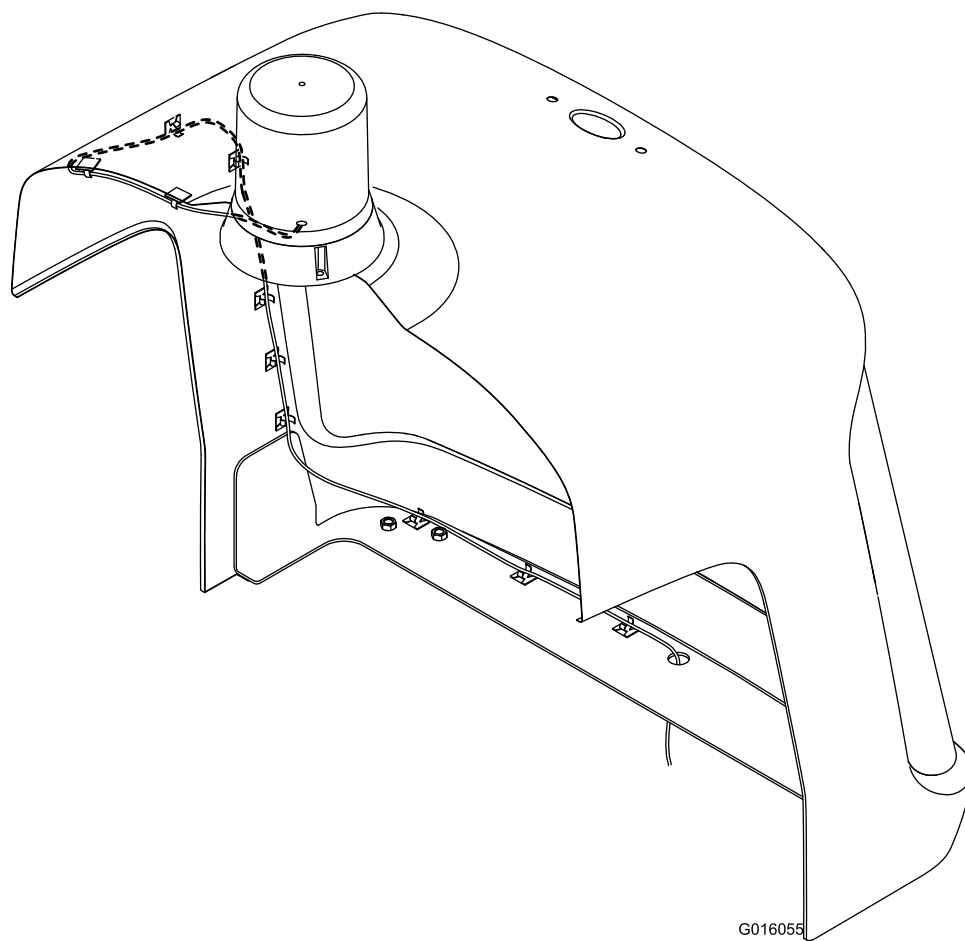


Figure 4

⚠ WARNING

The engine cover is made from glass reinforced plastic, always wear eye and mouth protection to prevent glass particles, which are created when drilling/machining the material, from coming into contact with eyes or from being ingested. If swallowed seek medical attention. In the event of contact with eyes, wash with running water and seek medical attention if symptoms persist.

Template

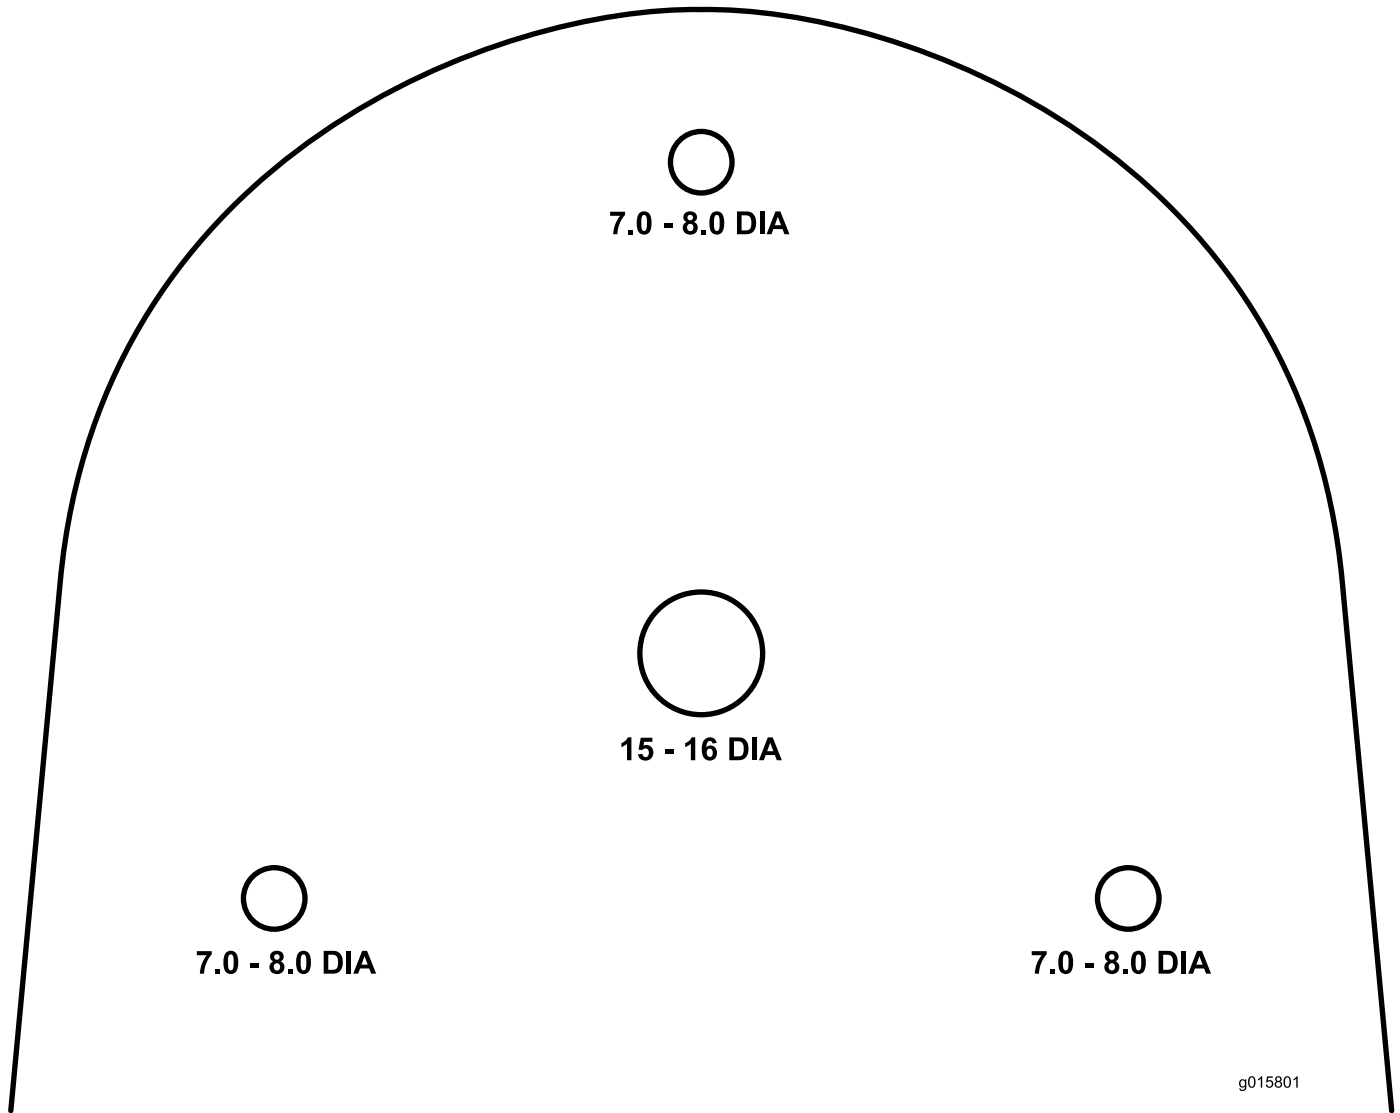


Figure 5
All dimensions in millimeters

Maintenance

Maintenance Tips

- Verify that the bulb is functional and that the reflector rotates properly.
- Clean the beacon regularly with a non petroleum-based cleaner.
- Always verify that the beacon is secured firmly to the mower before use.
- Ensure that the drain slots are kept clear of debris.
- If the mower is going to be stored outdoors, verify that the lens is secured properly to prevent water from entering the beacon.

Notes:

Notes:



The Toro Total Coverage Guarantee

A Limited Warranty

Conditions and Products Covered

The Toro® Company and its affiliate, Toro Warranty Company, pursuant to an agreement between them, jointly warrant your Toro Commercial product ("Product") to be free from defects in materials or workmanship for two years or 1500 operational hours*, whichever occurs first. This warranty is applicable to all products with the exception of Aerators (refer to separate warranty statements for these products). Where a warrantable condition exists, we will repair the Product at no cost to you including diagnostics, labor, parts, and transportation. This warranty begins on the date the Product is delivered to the original retail purchaser.

* Product equipped with an hour meter.

Instructions for Obtaining Warranty Service

You are responsible for notifying the Commercial Products Distributor or Authorized Commercial Products Dealer from whom you purchased the Product as soon as you believe a warrantable condition exists. If you need help locating a Commercial Products Distributor or Authorized Dealer, or if you have questions regarding your warranty rights or responsibilities, you may contact us at:

Commercial Products Service Department
Toro Warranty Company
8111 Lyndale Avenue South
Bloomington, MN 55420-1196
E-mail: commercial.warranty@toro.com

Owner Responsibilities

As the Product owner, you are responsible for required maintenance and adjustments stated in your Operator's Manual. Failure to perform required maintenance and adjustments can be grounds for disallowing a warranty claim.

Items and Conditions Not Covered

Not all product failures or malfunctions that occur during the warranty period are defects in materials or workmanship. This warranty does not cover the following:

- Product failures which result from the use of non-Toro replacement parts, or from installation and use of add-on, or modified non-Toro branded accessories and products. A separate warranty may be provided by the manufacturer of these items.
- Product failures which result from failure to perform recommended maintenance and/or adjustments. Failure to properly maintain your Toro product per the Recommended Maintenance listed in the *Operator's Manual* can result in claims for warranty being denied.
- Product failures which result from operating the Product in an abusive, negligent or reckless manner.
- Parts subject to consumption through use unless found to be defective. Examples of parts which are consumed, or used up, during normal Product operation include, but are not limited to, brakes pads and linings, clutch linings, blades, reels, bed knives, tines, spark plugs, castor wheels, tires, filters, belts, and certain sprayer components such as diaphragms, nozzles, and check valves, etc.

Countries Other than the United States or Canada

Customers should contact their Toro Distributor (Dealer) to obtain guarantee policies for your country, province, or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the Toro importer. If all other remedies fail, you may contact us at Toro Warranty Company.

- Failures caused by outside influence. Items considered to be outside influence include, but are not limited to, weather, storage practices, contamination, use of unapproved coolants, lubricants, additives, fertilizers, water, or chemicals, etc.
- Normal noise, vibration, wear and tear, and deterioration.
- Normal "wear and tear" includes, but is not limited to, damage to seats due to wear or abrasion, worn painted surfaces, scratched decals or windows, etc.

Parts

Parts scheduled for replacement as required maintenance are warranted for the period of time up to the scheduled replacement time for that part. Parts replaced under this warranty are covered for the duration of the original product warranty and become the property of Toro. Toro will make the final decision whether to repair any existing part or assembly or replace it. Toro may use remanufactured parts for warranty repairs.

Note Regarding Deep Cycle Battery Warranty:

Deep cycle batteries have a specified total number of kilowatt-hours they can deliver during their lifetime. Operating, recharging, and maintenance techniques can extend or reduce total battery life. As the batteries in this product are consumed, the amount of useful work between charging intervals will slowly decrease until the battery is completely worn out. Replacement of worn out batteries, due to normal consumption, is the responsibility of the product owner. Battery replacement may be required during the normal product warranty period at owner's expense.

Maintenance is at Owner's Expense

Engine tune-up, lubrication cleaning and polishing, replacement of Items and Conditions Not Covered filters, coolant, and completing Recommended Maintenance are some of the normal services Toro products require that are at the owner's expense.

General Conditions

Repair by an Authorized Toro Distributor or Dealer is your sole remedy under this warranty.

Neither The Toro Company nor Toro Warranty Company is liable for indirect, incidental or consequential damages in connection with the use of the Toro Products covered by this warranty, including any cost or expense of providing substitute equipment or service during reasonable periods of malfunction or non-use pending completion of repairs under this warranty. Except for the Emissions warranty referenced below, if applicable, there is no other express warranty.

All implied warranties of merchantability and fitness for use are limited to the duration of this express warranty. Some states do not allow exclusions of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions and limitations may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.