




MODEL NO. 04404-30001 - 80001 & UP  
MODEL NO. 04406-30001 - 80001 & UP  
MODEL NO. 04408-30001 - 80001 & UP

**OPERATOR'S  
MANUAL**

**GREENSMASTER 3000<sup>®</sup> CUTTING UNIT**

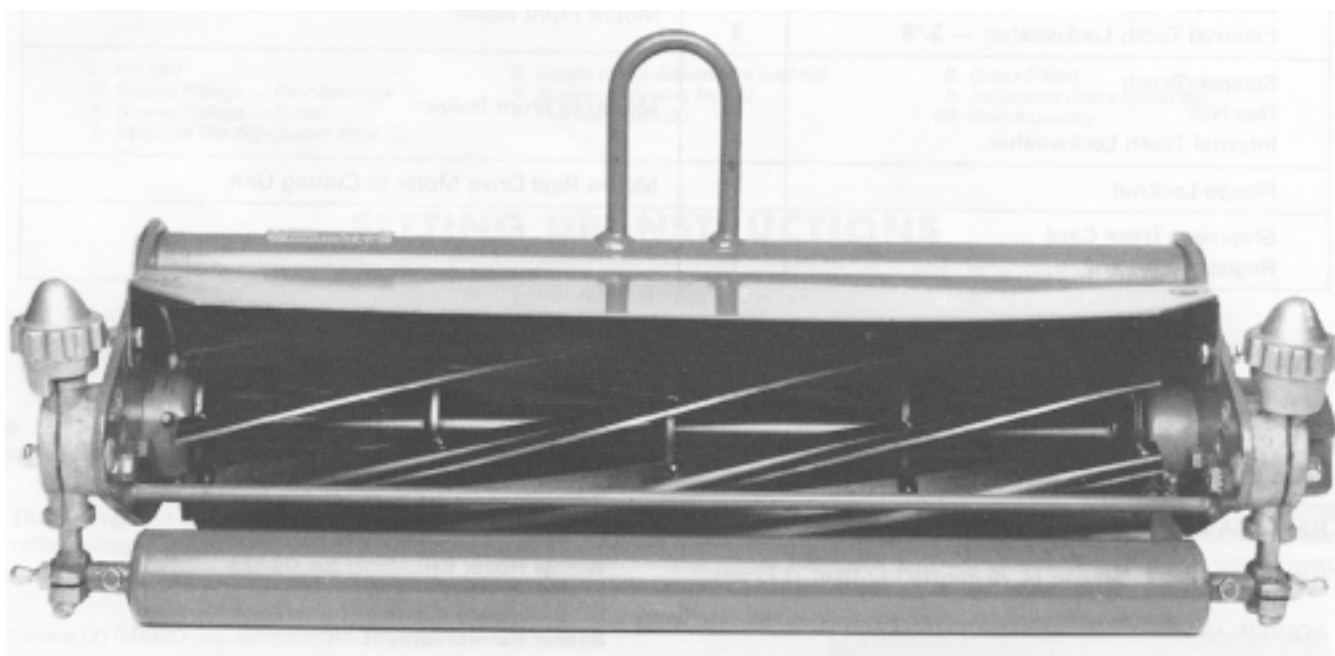

# TABLE OF CONTENTS

	Page		Page
LOOSE PARTS .....	2	LUBRICATION .....	6
SPECIFICATIONS .....	2	MAINTENANCE AND ADJUSTMENTS .....	7–9
KNOW YOUR CUTTING UNIT .....	3	Reel Lapping .....	7
SETTING UP INSTRUCTIONS .....	3–5	Removing Bedknife For Grinding .....	7
Adjusting Bedknife to Reel .....	3	Preparing Reel for Grinding .....	7
Adjusting Shield Height .....	4	Servicing and Adjusting Reel Bearings .....	8
Adjusting Top Bar .....	4	Removal of Reel Assembly .....	9
Adjusting Height–of–Cut .....	5	Leveling Rear Roller Assembly to Reel .....	9
Adjusting Brush Assembly .....	5	Maintenance Chart .....	11
Front Roller Scraper Adjustment .....	5	TORO PROMISE .....	Back Cover

## LOOSE PARTS

DESCRIPTION	QTY.	USE
Ball Stud	2	Mount Front Roller
External Tooth Lockwasher–3/8	2	
Scraper/Brush	1	Mount to Front Roller
Hex Nut	4	
Internal Tooth Lockwasher	4	
Flange Locknut	2	Mount Reel Drive Motor to Cutting Unit
Shipment Trace Card	1	
Registration Card	1	

## SPECIFICATIONS

**REEL DIAMETER:** 5 in. (2.7cm)

**HEIGHT–OF–CUT:** 3/16 (4.76 mm) to 11/16 (17 mm)

**POWER:** Hydraulic motor splined to reel shaft.

### Roller Adjustment:

**Front:** Micrometer hand adjustment with bolted clamp lock (1 turn = 0.025 in. (0.635 mm) height of cut change).

**Rear:** Pivot arm change on slot in side plate with locking screw for roller/reel parallelism.

**Bearings:** Timken tapered roller.

**Knife Adjustment:** Opposing screw.

### Options;

**Swaged Roller Kit:** Model No. 04414

**Full Roller Kit:** Model No. 04412

**Wiehle Roller Kit:** Model No. 04423

**Rear Roller Cleaner:** Part No. 42–4820

**Basket Reinforcement Kit:** Part No. 26–0900

**Variable Quick Height of Cut Kit:** Part No. 24–9400

**Quick Height of Cut Kit:** Part No. 29–5910

**Scraper Comb Assembly:** Part No. 11–0070

**Bearing Replacement Tool Kit:** Part No. 23–8900


**Tournament Bedknife:** Part No. 63–8560

**Lo–Cut Bedknife:** Part No. 63–8500

**Hi–Cut Bedknife:** Part No. 62–2510

**Fairway Bedknife:** Part No. 63–8610

# KNOW YOUR CUTTING UNIT

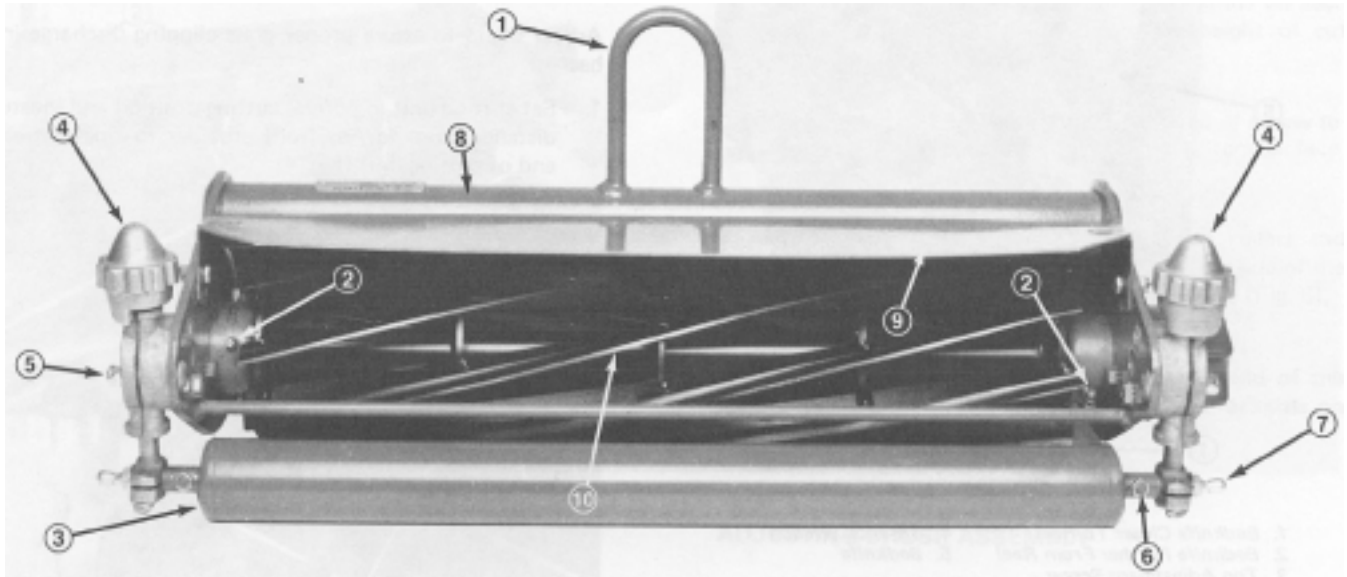

- |                                      |                                     |                                |
|--------------------------------------|-------------------------------------|--------------------------------|
| 1. Lift bail                         | 5. Height of Cut ADjustment Locknut | 8. Grass Shield                |
| 2. Grease Fittings—Reel Bearings     | 6. Scraper Adjusting Locknut        | 9. Adjustable Grass Shield Bar |
| 3. Grease Fittings—Roller            | 7. Pull Rod Studs (2)               | 10. Reel Assembly              |
| 4. Height of cut adjustment knob (2) |                                     |                                |

## SETTING UP INSTRUCTIONS

**Read the Operator's Manual thoroughly for setting up instructions. Failure to do so may result in damage to the cutting unit.**

**Note:** Left and right sides of cutting unit refer to normal operating position.


1. The cutting unit is shipped without a front roller. Install roller using loose parts supplied with cutting unit and instructions included with roller.
2. Retain (2) flange nuts supplied in loose parts for mounting reel drive motor to cutting unit.

### CHECK LIST:

1. Check for looseness in the bearings between the end plate and reel by moving reel laterally or axially on each end of Cutting Unit. Refer to Servicing and Adjusting the Reel Bearing, page 8.
2. Check drive end of reel for grease. Grease to be visibly evident.
3. Insure that all nuts and bolts are securely fastened.
4. Check level of rear roller to reel: refer to Leveling Rear Roller Assembly to Reel, page 9.

### ADJUSTING BEDKNIFE TO REEL


1. Adjustment of bedknife to reel is accomplished by first, loosening bottom screw on each side of cutting unit (Fig. 1), then tightening the top adjustment screw on each side of cutting unit (Fig. 2). This adjustment will position the bedknife closer to the reel blades.

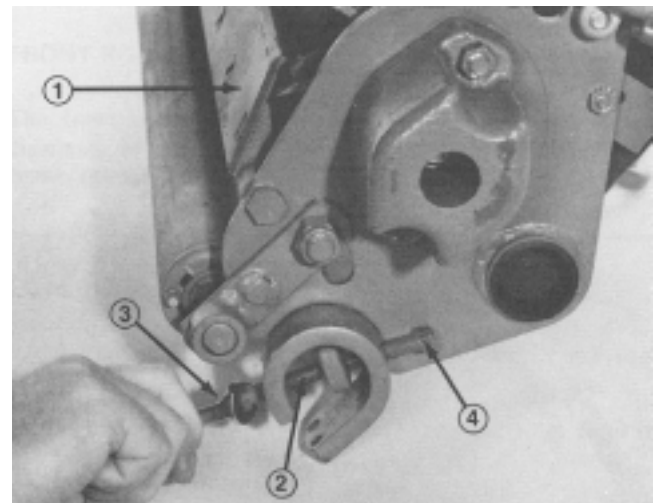

**Figure 1**

- |                            |                         |
|----------------------------|-------------------------|
| 1. Bedknife                | 3. 3/8 inch Wrench      |
| 2. Bottom Adjustment screw | 4. Top Adjustment Screw |

# SETTING UP INSTRUCTIONS

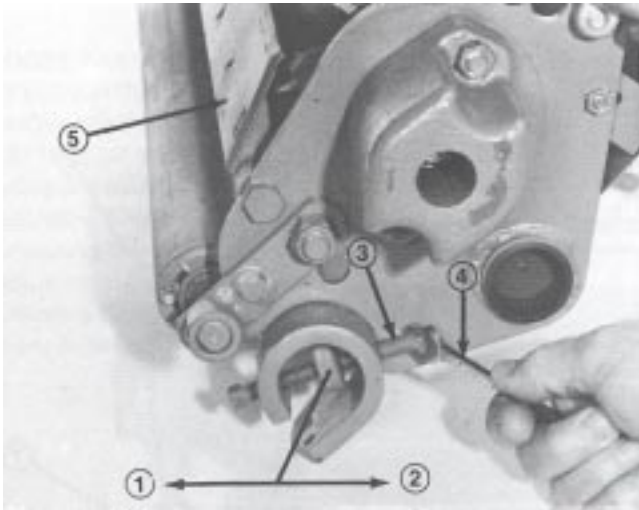


**Figure 2**

- |                               |                    |
|-------------------------------|--------------------|
| 1. Bedknife Closer To Reel    | 4. 3/8 inch Wrench |
| 2. Bedknife Further From Reel | 5. Bedknife        |
| 3. Top Adjustment screw       |                    |

**IMPORTANT:** Use only a 3/8 open end wrench 3 in. to 6 in. (7.6 to 15.2 cm) in length for adjusting bedknife to reel. A longer wrench will provide too much leverage and may cause distortion of the mounting plate for the adjustment screws.

2. After adjusting bedknife to reel, make sure that both the top and the bottom adjustment screws are secured on both ends of the cutting unit (Fig. 1, 2).

3. After the adjustment is accomplished, check to see if reel can pinch paper when inserted from the front and cut paper when inserted at a right angle (Fig. 3). It should be possible to cut paper with minimum contact between the bedknife and the reel blades. Should excessive reel drag be evident (more than 7 inch pounds (0.8 N•m)) it will be necessary to either back lap or regrind the cutting unit to achieve the sharp edges needed for precision cutting (see Toro reel sharpening manual, Form No. 80-300PT).

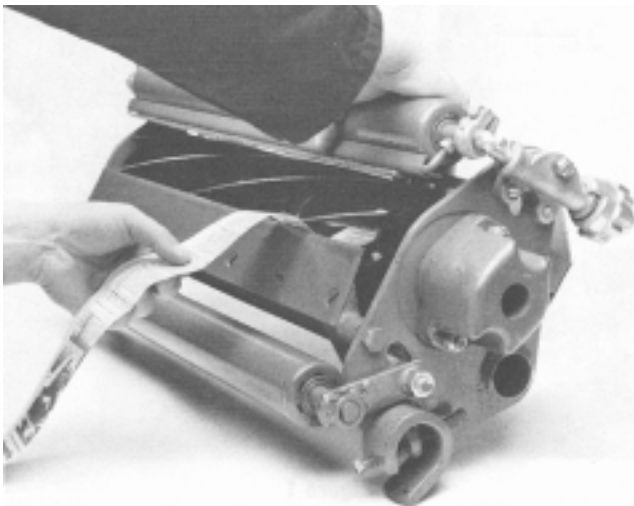


**Figure 3**

## ADJUSTING SHIELD HEIGHT

Adjust shield to assure proper grass clipping discharge into basket

1. Set cutting unit in normal cutting position and measure distance from top of front crossbar to shield at each end of cutting unit (Fig 4).

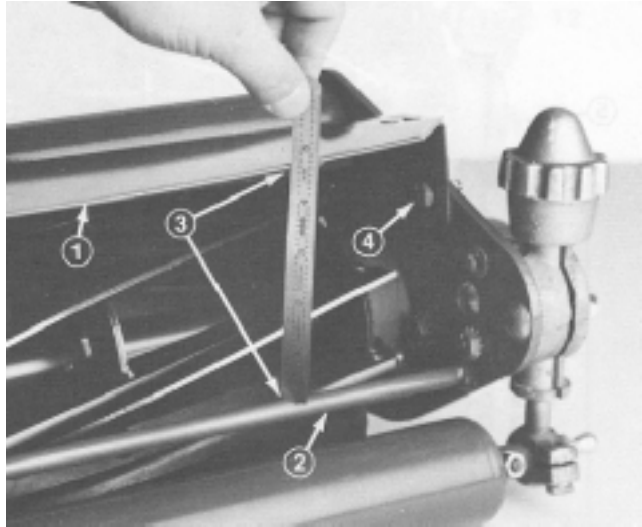

**Figure 4**

- |                   |                           |
|-------------------|---------------------------|
| 1. Shield         | 4. 4-3/4 inches (12.1 cm) |
| 2. Front Crossbar | 5. Bedknife               |

2. Height of shield from crossbar for normal cutting conditions should be 4-3/4 inches (12.1 cm). Loosen capscrews and nuts securing shield to each side-plate, adjust shield to correct height and tighten fasteners (Fig. 4).

3. Repeat adjustment on remaining cutting units and adjust top bar: refer to Adjusting Top Bar, page 4.

**NOTE: Shield can be lowered in dry grass conditions (clippings fly over top of baskets) or raised to allow for heavy wet grass conditions (clippings build up on rear edge of baskets).**


## ADJUSTING TOP BAR

Adjust top bar to assure clippings are cleanly discharged from reel area:

1. Loosen screws securing top bar (Fig. 5). Insert 0.060 inch (1.5 mm) feeler gauge between top of reel and bar and tighten screws (Fig. 5). Assure bar and reel are equal distance apart across complete reel.

**NOTE: Bar is adjustable to compensate for changes in turf conditions. Bar should be adjusted closer to reel when turf is extremely wet. By contrast, adjust bar further away from reel when turf conditions are dry. Bar should be parallel to reel to assure optimum performance and should be adjusted whenever shield height is adjusted or whenever reel is sharpened on a reel grinder.**

# SETTING UP INSTRUCTIONS

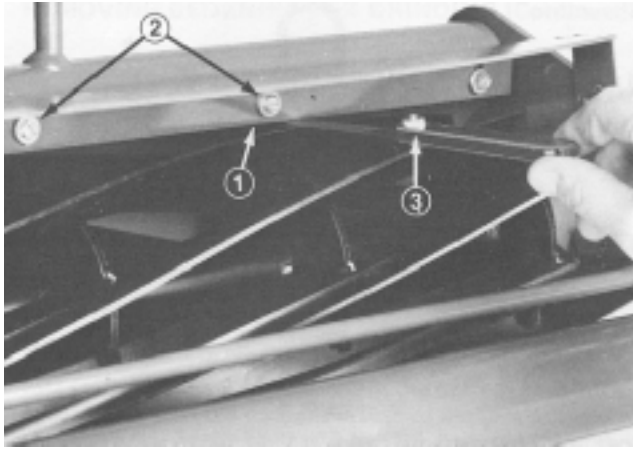


**Figure 5**

1. Top Bar
2. Bar Mounting Screws
3. Feeler gauge

## ADJUSTING HEIGHT OF CUT

1. For adjusting cutting unit height—of—cut 1/4 in. (6 mm) or below, set rear roller in the lowest height—of—cut position: refer to Levelling Rear Roller Assembly To Reel, page 9. To adjust the height of cut, the cutting unit should be turned over and the locknuts on each end of the cutting unit securing the height of cut adjusting knob loosened (Fig. 6).

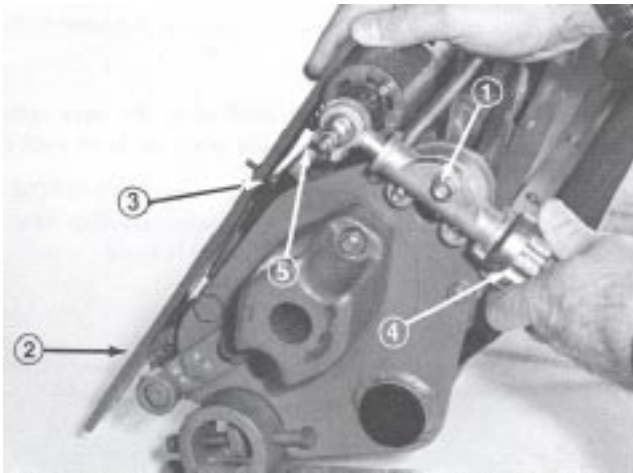

**Figure 6**

1. Height of Cut Knob Locknut
2. Gauge Bar (1-8789)
3. Gauge Bar Screwhead
4. Height of Cut Knob
5. Roller Shaft Clamp Bolt

2. On gauge bar (Part no.1-8789), set head of screw to desired height of cut. This measurement is from bar face to underside of screw head.

3. Place the bar across the front and rear rollers and adjust the height of cut knob until the underside of the screw head engages the bedknife cutting edge (Fig. 6).

**IMPORTANT: Do procedure No.3 on each end of the bedknife. Retighten height of cut adjustment locknuts on both ends.**

## ADJUSTING BRUSH ASSEMBLY

To adjust the brush assembly, proceed as follows:

1. Assure rear roller is in the desired height—of—cut position. Loosen the bolts anchoring the front roller shaft. Rotate the shaft (Fig. 6).

2. To adjust the aggressiveness of the brush, proceed as follows:

A. Bristles touching the adjusting gauge bar gives you an aggressive setting.

B. Adjustment of the brush assembly so it is midway between the adjusting gauge bar and the cutting edge of the bedknife will provide a medium setting.

C. Adjusting the brush assembly so it is even with the cutting edge of the bedknife will provide a light setting.

**NOTE: Securing one end of the brush assembly at a time simplifies the above procedure.**

3. Tighten the roller shaft bolts (Fig. 6).

## FRONT ROLLER SCRAPER ADJUSTMENT

The front roller scraper should be adjusted so there is a clearance of approximately 1/32 of an inch (0.8 mm) between the scraper and roller.

# LUBRICATION

There are six (6) grease fittings on each cutting unit (Fig. 7, 8). Which should be greased at least once every two weeks. Lubricate using a No. 2 multi-purpose lithium base grease. A hand operated grease gun is recommended for best results.

1. Wipe each grease fitting with a clean rag.
2. Grease reel bearings as follows:
  - A. Hydraulic motor end; apply grease until pressure is felt against handle.

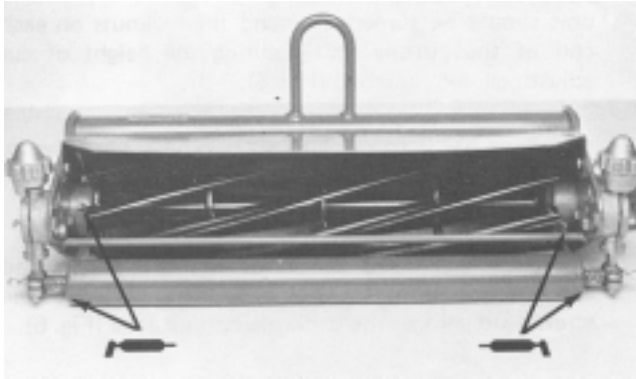


Figure 7

- B. Counterbalance end; apply grease until it starts to come through seal inside counterbalance hole.

3. Apply grease to front and rear roller bearings until it begins to show around seal lips.

**IMPORTANT: Do not apply too much pressure or grease seals as they will be permanently damaged.**

4. Wipe excess grease away.

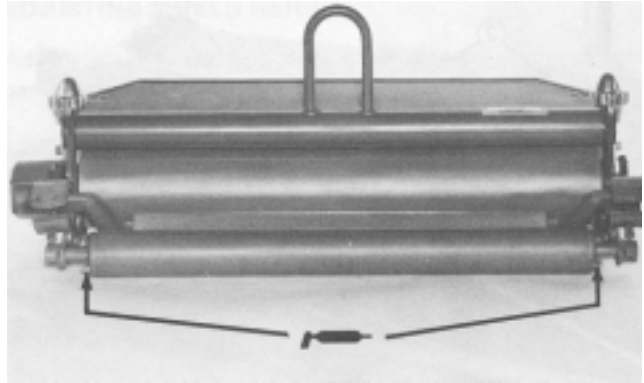


Figure 8

# MAINTENANCE AND ADJUSTMENTS

**IMPORTANT:** Reel motors must be removed before removing the cutting units to prevent hose damage due to twisting, bending, and kinking.

## REEL LAPPING

Connect a lapping machine to the cutting unit with an extension coupler, and a 9/16 socket. The 9/16 socket can be positioned onto the capscrew on the reel shaft inside the counter-balance weight on the end of the cutting unit. Backlap according to procedures in the TORO Sharpening Reel & Rotary Mowers Manual Form No. 80-300PT.

1. Using a brush with a long handle, apply lapping solution evenly over full length of reel assuring all reel blades are covered. Re-apply lapping solution whenever noise of reel operating against bedknife begins to disappear or when reel appears to have even concentrations of material.

**Note:** For a better cutting edge, run a file across the front face of the bedknife when the lapping operation is completed. This will remove any burrs or rough edges that may have built up on the cutting edge.



## CAUTION


Be careful when lapping the reel because contact with the reel or other moving parts can result in personal injury. Under no circumstances use a short handled paint brush. 29-9100 Handle Assembly complete or individual parts are available from your local Authorized TORO Distributor.

## REMOVING BEDKNIFE FOR GRINDING

**IMPORTANT:** Before removing cutting unit, remove reel motors to prevent damaging hydraulic hoses.

The rear roller assembly must be removed in order to remove the bedknife assembly for sharpening. To remove the rear roller proceed as follows:

1. Remove capscrew and nut anchoring the rear roller height-of-cut bracket to the side plate on both ends of the cutting unit (Fig. 9).

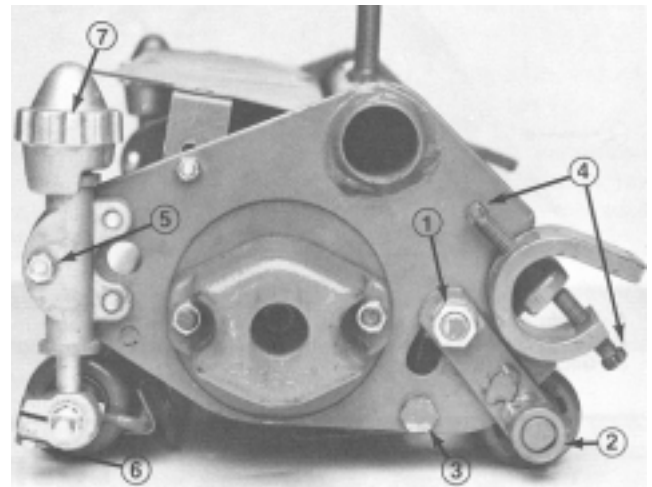

**Figure 9**


1. Rear Roller Height of Cut Bracket
2. Allen Set Screw
3. Bedbar Mounting Bolts
4. Bedknife Adjusting Screws
5. Height of Cut Rod Locknuts
6. Roller Shaft Clamp Bolts
7. Height of Cut Adjustment Knob

2. Loosen Allen set screws anchoring the roller shaft (Fig. 9).

3. Remove the rear roller height-of-cut brackets from both side plates.

4. Remove the bedbar mounting bolts from each end of the cutting unit (Fig. 9). Then loosen the bedknife adjusting screws at each end of the cutting unit (Fig. 9). The bedknife assembly can then be removed by rotating it away from the reel.

**IMPORTANT:** When reinstalling the bedbar assembly, be sure to position the center portion of the grass shield over the rear edge of the bedbar (Fig. 10). Securely seat the (2) bedbar pivot bolts to a maximum of 40 ft-lbs. Always recheck bearing adjustment after reassembling bedbar.

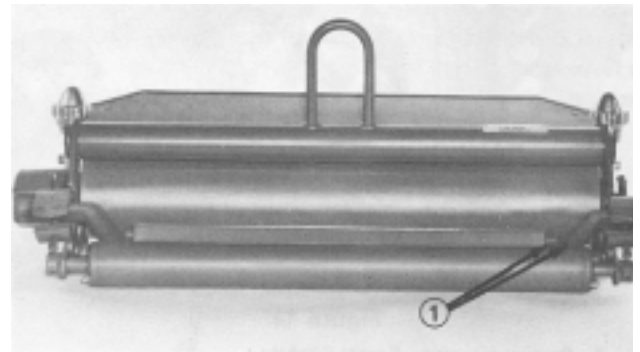

**Figure 10**

1. Bedbar Under Lip of Shield

**NOTE:** For proper grinding of bedknife, grind in accordance with procedures in the TORO Sharpening Reel & Rotary Mowers Manual Form No. 80-300PT.

# MAINTENANCE AND ADJUSTMENTS

## PREPARING REEL FOR GRINDING

**IMPORTANT:** Before removing cutting unit, remove reel motors to prevent damaging hydraulic hoses.

The front roller may have to be removed so that the reel can be sharpened. To accomplish this, proceed as follows:

**IMPORTANT:** Some reel grinders may require that the rear roller assembly be mounted to the cutting unit for proper support in the reel grinder.

1. Loosen the locknuts securing the height of cut adjusting rods at both ends of the cutting unit and the roller shaft clamp bolts (Fig. 9).
2. Turn the height of cut adjustment knobs until they are disconnected from the height of cut adjusting rods (Fig. 9). The knobs are captivated on the upper washer face of height of cut clamp.
3. The roller assembly can then be removed from the cutting unit by pulling evenly on both sides.
4. For proper grinding of reel, grind in accordance with procedures in TORO Sharpening Reel & Rotary Mowers Form No. 80–300PT.


**IMPORTANT:** After grinding operation is complete, reassemble cutting unit, check bearing adjustment and adjust top shield and bar; refer to Adjusting Shield Height and Adjust Top Bar, page 4. Back lap the cutting unit to complete sharpening operation.

## SERVICING AND ADJUSTING THE REEL BEARINGS

**IMPORTANT:** Before removing cutting unit, remove reel motors to prevent damaging hydraulic hoses.

It is recommended that a check be made periodically of the drag on the reel bearings. The reel bearings can be checked and adjusted in the following manner:


1. First, adjust the bedknife so it is not in contact with the reel.
2. The reel bearing drag should be from 7 to 11 inch pounds. This can be measured with a torque wrench (Fig. 11).

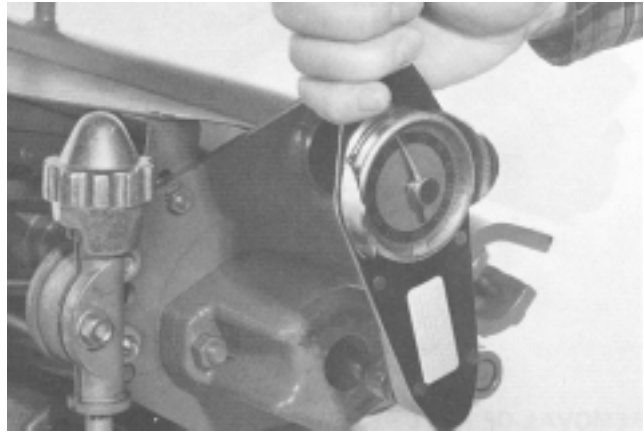

**Figure 11**

Should you find the bearing drag does not meet the above specification, the procedure to adjust the reel bearing drag is as follows:

1. Remove the mounting nuts from the counterbalance end cap and remove end cap from the mounting studs (Fig. 12).
2. Remove bolt mounted on the end of reel shaft. This will make it possible for a large socket wrench to be mounted on the reel bearing adjusting nut inside the side plate.

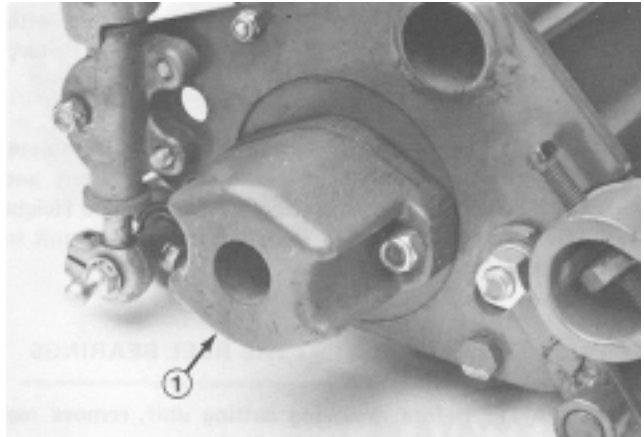


**Figure 12**

1. Counterbalance End Cap

3. With the wrench mounted, hold the reel and tighten the large reel bearing adjustment nut (Fig. 13). Tighten until the drag on the reel meets 7 to 11 inch–pound specification.
4. Reinstall bolt into end of the reel shaft and check the torque with an inch/pound torque wrench (Fig. 13).




# MAINTENANCE AND ADJUSTMENTS

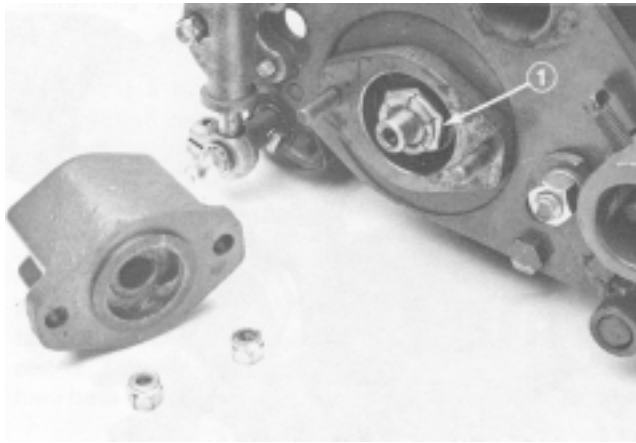

**Figure 13**

1. Reel Bearing Adjustment Nut

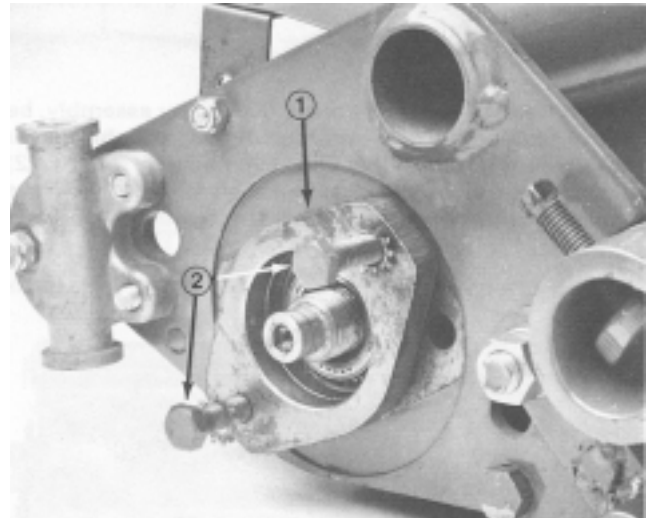

**Figure 14**

1. Bearing Housing—Rotate Slightly
2. Bearing Housing Mount Bolts—Thread Against Side Plate to Remove Housing

6. The bearing housing will slip out of the side plates and the reel assembly can be removed as soon as the bearing housings are disassembled from the side plates.

## REMOVAL OF REEL ASSEMBLY

**IMPORTANT: Before removing cutting unit, remove reel motors to prevent damaging hydraulic hoses.**

To remove the reel assembly, proceed as follows:


1. Remove the front and rear roller assembly.
2. Remove counterbalance End Cap (Fig. 12).
3. Remove the large bearing adjustment nut from one end of the reel shaft (Fig. 12) and the special spline nut at the opposite end of the reel shaft.
4. Remove the mounting bolts from the bearing housing; both ends of cutting unit.

**IMPORTANT: Remove grease fittings from the bearing housing at each end of the cutting unit. Note that the straight fitting is on the right end, and the 90° fitting is on the left end (when viewed in the direction of travel).**

5. Using a plastic headed hammer, rotate bearing housing slightly, install bearing housing bolts from outside housing, turn bolts alternately against side plate and use this method to remove bearing housing (Fig 14).

## LEVELING REAR ROLLER ASSEMBLY TO REEL

1. Mount rear roller and height-of-cut brackets onto cutting unit. For height-of-cut settings 1/4 inch (6 mm) or below, set one bracket in the side plate to 1/8 inch (3 mm) from bottom of the slot and tighten nut on the capscrew. Leave bracket on the other side mounted loosely (Fig. 15). Above 1/4 inch (6 mm) height-of-cut, center bracket in slot and tighten nut.

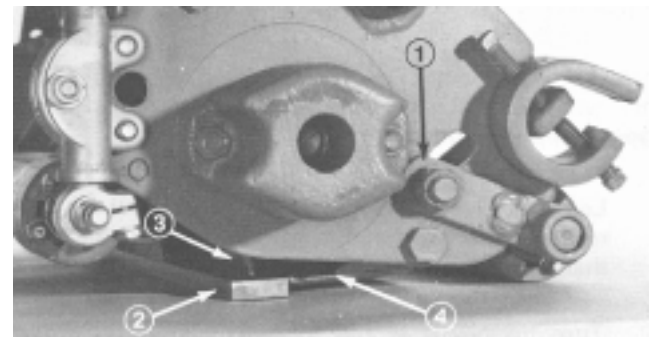

**Figure 15**

1. Rear Roller Bracket
2. 1/4 Inch (6 mm) Steel Plate
3. Reel Blades
4. Bedknife


2. Place a 1/4 inch (6 mm) or thicker plate under the reel blades and against the cutting edge of the bedknife (Fig. 15).

**NOTE: Be sure the plate covers the full length of reel blades.**

## MAINTENANCE AND ADJUSTMENTS

3. With the Cutting Unit reel blades positioned on the plate, hold Cutting Unit securely and push down on the rear roller assembly until it contacts the working surface across the full length of the roller (Fig. 16).

**NOTE:** This adjustment should be made on a flat working surface. If roller does not fully contact surface because bracket is bottomed out in slot, therefore hindering leveling of roller, loosen nut on roller bracket and move bracket up in slot to level roller on flat surface. Re-tighten nut and proceed to item 4.

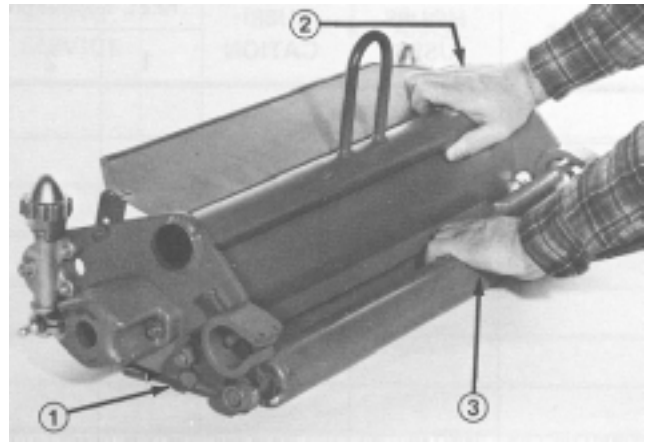

**Figure 16**

1. Unit on Level Surface
  2. Hold Down Securely
  3. Push Down on Roller
4. Secure nut on outside of rear roller height-of-cut bracket to lock roller in place.

## MAINTENANCE CHART

[illegible]

## The Toro Promise

### A One Year Limited Warranty

*The Toro Company promises to repair your TORO product if defective in materials or workmanship. The following time periods from the date of purchase apply:*

#### **Commercial Products ..... 1 Year**

*The cost of parts and labor are included, but the customer pays the transportation costs on walk rotary mowers with cutting unit widths of less than 25".*

---

If you feel your TORO Product is defective and wish to rely on The Toro Promise, the following procedure is recommended:

1. Contact your Authorized TORO Distributor or Commercial Dealer (the Yellow Pages of your telephone directory is a good reference source).
2. The TORO Distributor or Commercial Dealer will advise you on the arrangements that can be made to inspect and repair your product.
3. The TORO Distributor or Commercial Dealer will inspect the product and advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without an extra charge to you.

If for any reason you are dissatisfied with the distributor's analysis of the defect or the service performed, you may contact us.

Write:

TORO Commercial Products Service Department  
8111 Lyndale Avenue South  
Minneapolis, MN 55420

The above remedy of product defects through repair by an Authorized TORO Distributor or Commercial Dealer is the purchaser's sole remedy for any defect.

THERE IS NO OTHER EXPRESS WARRANTY. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This Warranty applies only to parts or components which are defective and does not cover repairs necessary due to normal wear, misuse, accidents, or lack of proper maintenance. Regular, routine maintenance of the unit to keep it in proper operating condition is the responsibility of the owner.

All warranty repairs reimbursable under The Toro Promise must be performed by an Authorized Toro Commercial Dealer or Distributor using Toro approved replacement parts.

Repairs or attempted repairs by anyone other than an Authorized TORO Distributor or Commercial Dealer are not reimbursable under the TORO Promise. In addition, these unauthorized repair attempts may result in additional malfunctions, the correction of which is not covered by warranty.

THE TORO COMPANY IS NOT LIABLE FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE USE OF THE PRODUCT INCLUDING ANY COST OR EXPENSE OF PROVIDING SUBSTITUTE EQUIPMENT OR SERVICE DURING PERIODS OF MALFUNCTION OR NON-USE.

Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

#### **COUNTRIES OTHER THAN THE UNITED STATES OR CANADA**

Customers who have purchased TORO products exported from the United States or Canada should contact their TORO Distributor (Dealer) to obtain guarantee policies for your country, province, or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact the TORO importer. If all other remedies fail, you may contact us at The Toro Company.