



Model No. 04125

# OPERATOR'S MANUAL

## GROOMING REEL KIT FOR GREENSMASTER 1000

### LOOSE PARTS

DESCRIPTION	QTY.	USE
Frame Assembly, R.H.	1	Attaches to right frame
Frame Assembly, L.H.	1	Attaches to left frame
Bearing Adapter	2	Connects groomer to reel frame
Spacers	4	Connects groomer to reel frame
Flat Head Screws	2	Fastens bearing adapters
Lock Nut	4	Fastens bearing adapters
Grooming Reel Assembly	1	41 blades, 1/2" spacing
Pulley, Driven	1	Attaches to grooming reel
Lock Nut	1	Attaches to grooming reel
Clutch Assembly	1	Drives belt
Belt	1	Drives grooming reel
Ring Adapter	2	Connects groomer to reel frame
Operator's Manual	1	

### SET UP INSTRUCTIONS

**IMPORTANT:** Read this Operator's Manual thoroughly before setting up or operating the groomer. Failure to follow set up or operating instructions in this manual may result in damage to the machine and/or the groomer or the turf.

**Note:** Terms "left" and "right" used in the text refer to left and right sides of the machine as viewed from the operator's position.

1. Loosen carriage bolts, washers, and locknuts securing roller adjusting screws to height-of-cut brackets (Fig. 1).

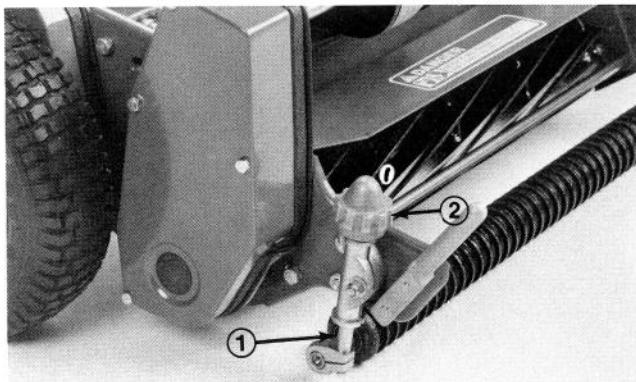


Figure 1

1. Roller adjusting screw
2. Adjusting knob

2. Loosen height-of-cut adjusting knobs until roller and adjusting screws slide out of height-of-cut brackets (Fig. 1).

3. Rotate roller so height-of-cut adjusting screws point forward and reinstall roller height-of-cut adjusting screws to height-of-cut brackets.

4. Remove (2) capscrews securing end cap to left side plate of machine and remove end cap. Retain end cap and mounting screws for use if groomer is ever removed (Fig. 2).

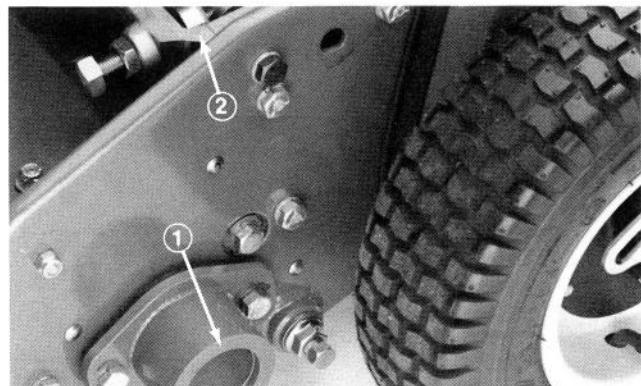


Figure 2

1. End cap
2. Bedbar adjuster frame

5. Remove (2) capscrews and washers securing left bedbar adjuster frame to side plate (Fig. 2).
6. Install the left grooming reel housing assembly onto the left reel frame using the following procedure:
  - A. Remove (3) socket head capscrews and lock washers securing cover to groomer housing assembly (Fig. 3).

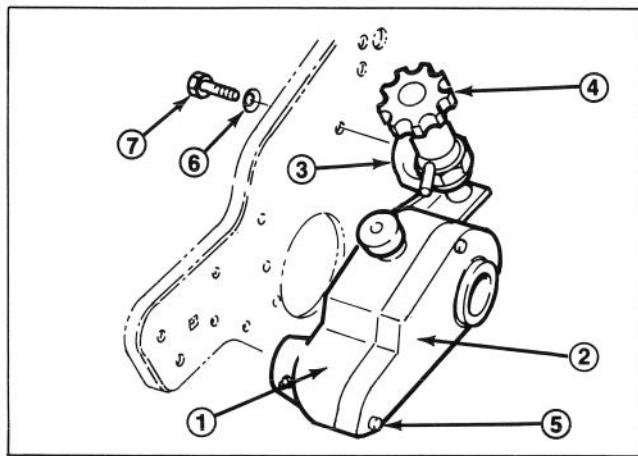


Figure 3

1. Left grooming reel housing assembly	5. Socket head screw
2. Housing cover	6. Belleville washer
3. Mounting block	7. Capscrew
4. Adjustment knob assembly	

- B. Insert an adapter ring into reel bearing housing. Insert the two 3/8-16 x 2" lg. flat head screws through bearing adapter and position spacers on ends of screws (Fig. 4). Align bearing adapter, spacers and screws with bronze bearing and slots in groomer housing. Slide the bearing adapter through the bronze bearing in the groomer housing assembly and into the reel bearing housing. Install locknuts on flat head screws and torque to 23 to 27 ft-lb.

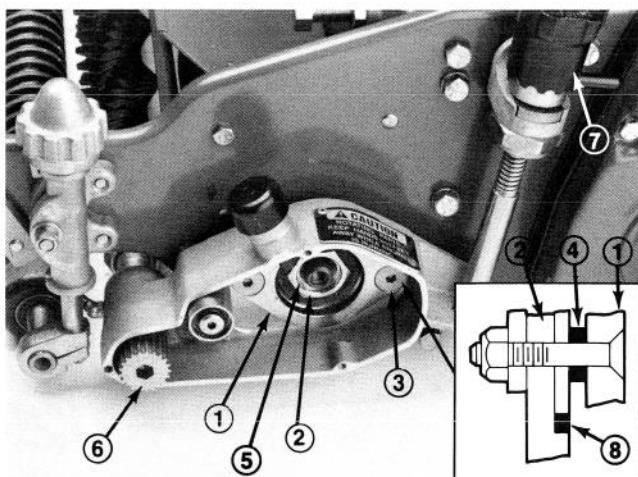


Figure 4

1. Bearing adapter	5. Bearing locknut
2. Reel bearing housing	6. Driven pulley
3. Flat head screw	7. Groomer adjustment knob
4. Spacer	8. Ring adapter

**Note:** To gain access to locknuts it may be necessary to move or remove the bedbar.

7. Slide one end of the grooming shaft assembly into the bearing support in the groomer housing assembly (Fig. 4). Mount the driven pulley (left hand thread) to the end of the groomer shaft and torque to 29 to 35 ft-lb, using a 3/8" allen socket on a torque wrench (Fig. 4).
8. Mount groomer adjustment knob assembly to left side of plate with a 3/8-16 x 5/8" lg. capscrew and belleville washer. Reinstall left bedbar adjuster frame to side plate with capscrews and washers previously removed (Fig. 3).

9. Remove (4) capscrews securing reel drive cover to right side plate and remove cover (Fig. 5).

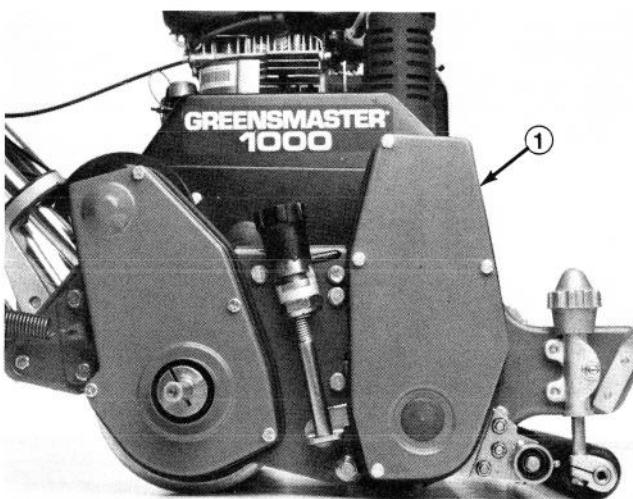


Figure 5

1. Reel drive cover

10. Loosen idler pulley mounting screws to relieve belt tension and remove belt from pulleys (Fig. 6).

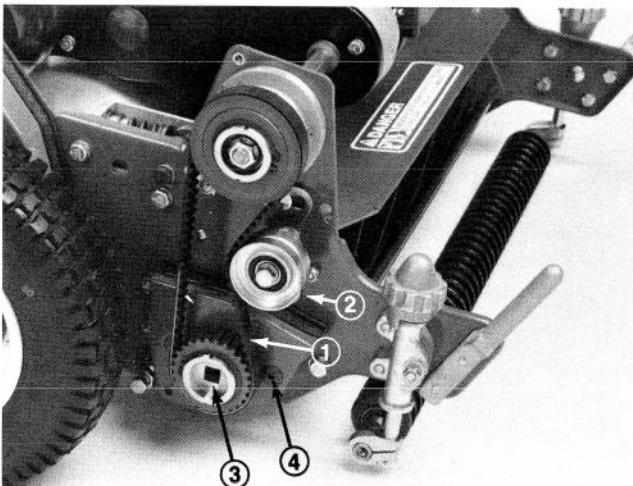


Figure 6

1. Traction drive belt	3. Drive pulley
2. Idler pulley	4. Flat head machine screw

11. Using a 1/2" drive ratchet and extension, remove drive pulley from reel shaft (Fig. 6). Secure the reel from turning with a wood block.

12. Remove (2) flat head machine screws and nuts securing groomer arm cover to bearing housing and side plate (Fig. 6). Remove groomer arm cover and retain fasteners.

13. Remove (2) capscrews and washers securing right bedbar adjuster frame to side plate (Fig. 6).

**CAUTION: DO NOT REMOVE BED BAR ADJUSTING SCREWS FROM FRAME ADJUSTERS UNTIL BED BAR HAS BEEN REMOVED, BECAUSE SPRINGS ARE UNDER TENSION AND COULD FLY UPWARD.**

14. Using a spring compressor or clamp, compress springs on bed bar adjusting screws to free adjuster from bedbar ear.

15. Install the right hand groomer plate assembly onto the right reel bearing housing using the following procedure:

A. Slide the groomer plate assembly over the end of the groomer shaft (Fig. 7).

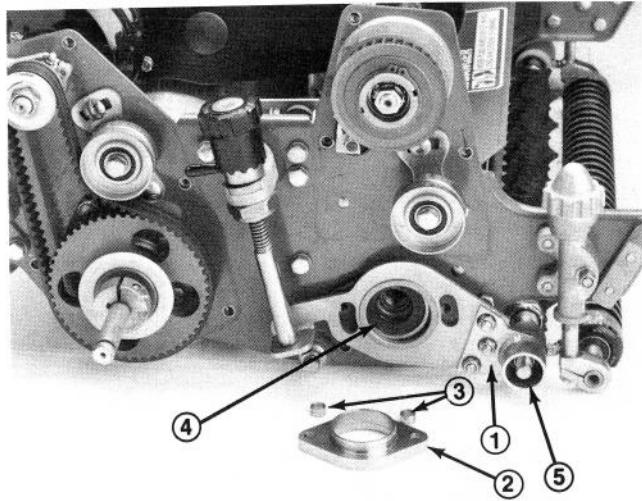


Figure 7

1. Groomer plate assy.	4. Adapter ring
2. Bearing adapter	5. Groomer shaft
3. Spacer	

B. Insert an adapter ring into reel bearing housing. Insert the two 3/8-16 x 2" lg. flat head screws through the groomer arm cover and bearing adapter. Put a spacer over each screw before positioning the adapter into the reel bearing housing. Slide the adapter through the bronze bearing in the groomer plate assembly and into the reel bearing housing. Install lock-nuts on flat head screws and torque to 23 to 27 ft-lb (Fig. 7).

C. Secure right end of groomer shaft to groomer plate assembly with a 1/2-20 locknut (Left hand thread) Torque to 29 to 35 ft-lb (Fig. 7)

16. Mount groomer adjustment knob assembly to right side plate with a 3/8-16 x 5/8" lg. capscrew and belleville washer. Reinstall left bedbar adjuster frame to side plate with capscrews and washers previously removed (Fig. 7).

17. Install Belt Drive Clutch using the following procedure:

A. Remove the clutch engagement knob from the clutch assembly by loosening the (2) allen head set screws and removing the nut and washer from the clutch adapter shaft (Fig. 8).

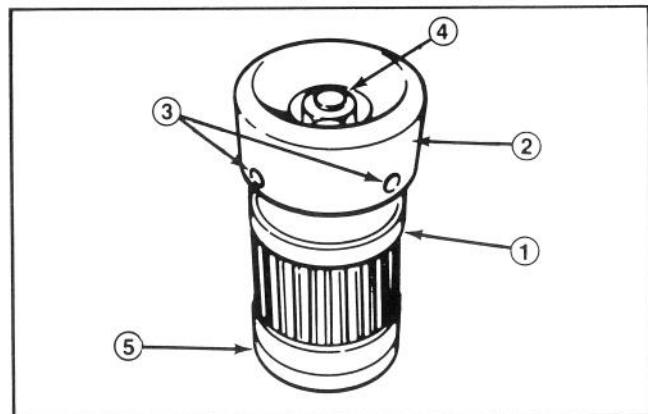


Figure 8

1. Belt drive clutch assembly	4. Nut and washer
2. Engaged/disengagement knob	5. Clutch adapter shaft
3. Allen head set screws (2)	

B. Remove bearing locknut from reel shaft (Fig. 4). Secure the reel from turning with a wood block.

C. Remove the adapter from the clutch assembly and screw the adapter onto the left reel shaft extension (Fig. 9). Secure the reel from turning with a wood block and torque the clutch adapter to a minimum of 17 ft-lb.

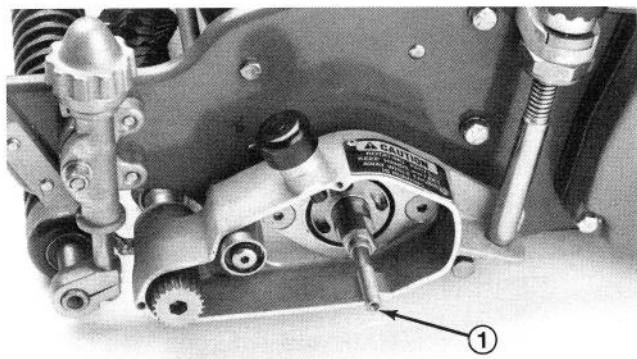


Figure 9

1. Adapter
------------

D. Position the toothed belt over the drive pulley (that was removed from the clutch in step 10). While holding the belt on the drive pulley, simultaneously slide the drive pulley back into place on the clutch adapter and position the belt around the driven pulley and under the backside idler (Fig. 10).

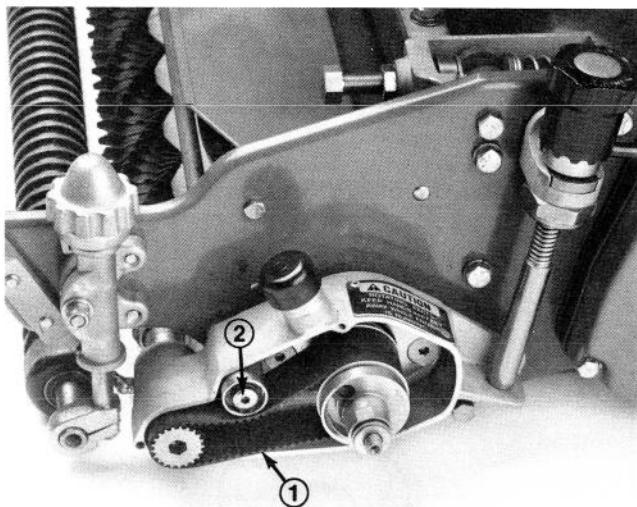


Figure 10

1. Toothed belt
2. Idler

**IMPORTANT:** If the clutch mechanism has separated due to the removal of the nut and washer, ensure the belleville washers are properly installed; refer to figure 11.

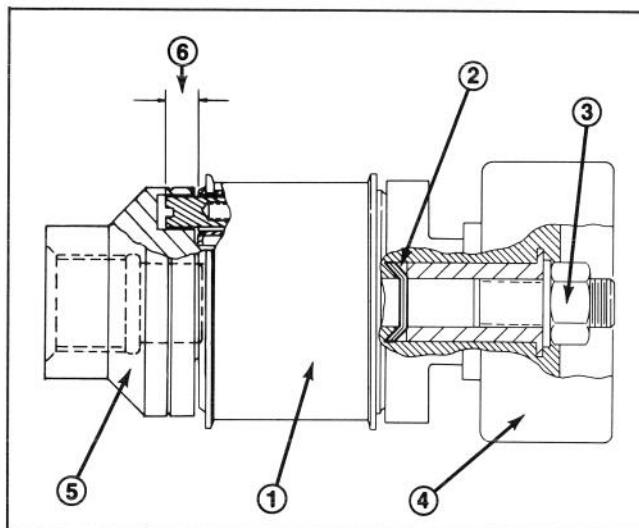


Figure 11

1. Clutch body
2. Belleville washers (2)
3. Nut and washer
4. Engaged/disengage knob
5. Clutch to reel shaft adapter
6. .270 inch  $\pm .010$  (with pin fully extended)

E. Install the washer and nut (that was removed in step 17A) onto the clutch adapter shaft. Secure the reel from turning with a wood block and torque nut to 10 to 14 ft-lbs.

F. Check the tension on the drive belt by depressing it at the midpoint between the drive pulley and the driven pulley (Fig. 10). A force of 5 to 10 lbs. should be required to depress the midpoint of the belt 1/4 inch. To adjust tension, loosen the backside idler pulley pivot allen head bolt, pivot the idler to achieve the

proper tension, and torque the allen head bolt to 7 to 10 ft-lbs.

18. Reinstall the clutch housing cover to clutch housing, using the (3) socket head screws and lockwashers previously removed (Fig. 12).

19. Reinstall the clutch engagement knob to the clutch assembly with two allen head set screws, previously removed (Fig. 12).

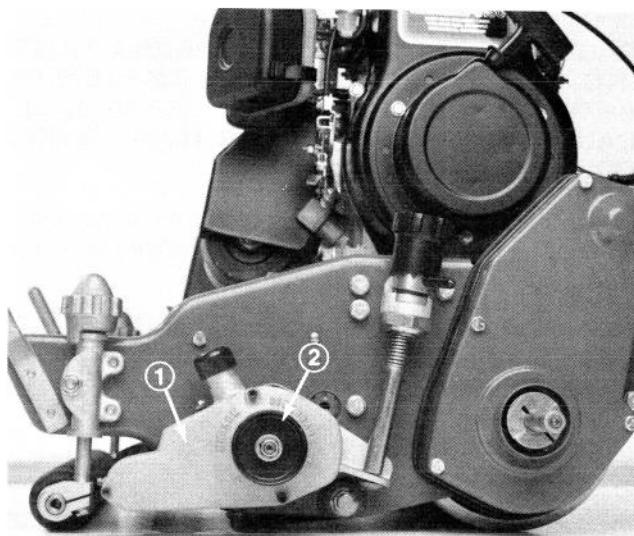


Figure 12

1. Clutch housing cover
2. Clutch engagement knob

20. Using a 1/2" drive ratchet and extension, reinstall drive pulley and belt to reel shaft (Fig. 13). Secure the reel from turning with a wood block. Tighten pulley to 40 to 60 ft-lbs of torque. Pivot the idler pulley against the backside of the belt and apply 20 to 25 lbs of force to the idler pulley. Tighten idler pulley mounting screws. **DO NOT OVERTIGHTEN BELT.**

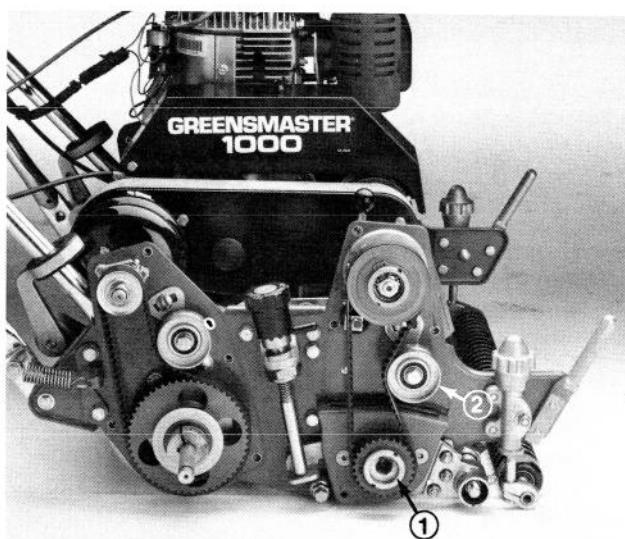


Figure 13

1. Drive pulley
2. Idler pulley

21. Reinstall drive belt cover to sideplate with (4) capscrews previously removed.

22. Check the assembly. Rotate both quick up levers to raise the grooming reel into the transport position (Fig. 14). Hold the clutch snubber down and rotate the clutch knob clockwise to disengage the clutch (Fig. 14). Correct any problems and recheck assembly.

23. Using a hand pump grease gun, lubricate the (2) grooming reel shaft bearings (one on each end). Pump only 2-3 pumps maximum to avoid permanently damaging the grease seals.

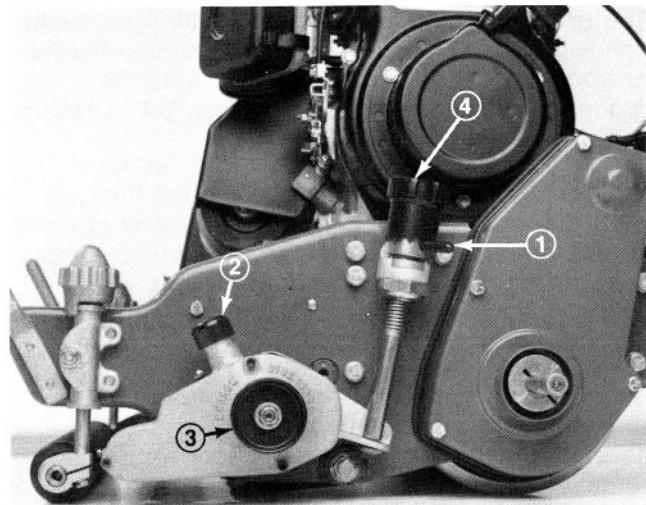


Figure 14

- 1. Quick up lever
- 2. Clutch snubber
- 3. Clutch knob
- 4. Micro adjustment knob

## OPERATING INSTRUCTIONS

### INTRODUCTION

Grooming golf course greens is a variation of an old technique that is receiving new found popularity. It is associated with the golfer's desire for faster and truer greens. Grooming is usually performed above the soil level. Grooming promotes vertical growth of the grass by cutting runners (stolons), removing thatch and encouraging denser growth and deeper rooting (Fig. 15). This can, in effect yield a more even grass with less "grain" for faster and truer action of the golf ball.

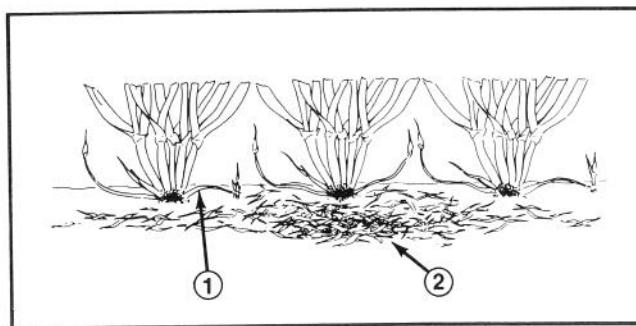


Figure 15

- 1. Grass runners (Stolons)
- 2. Thatch

Grooming is similar to verti-cutting in its runner cutting action. Grooming however, can not deeply penetrate the soil like verti-cutting. Groomer blades are spaced closer together and are used more often than verti-cutters so that they are more effective in cutting runners and removing thatch. Verti-cutters are used primarily for greens renovation while groomers are used for ongoing greens upkeep.

It is difficult to make precise recommendations on the use of grooming reels because so many variables affect the performance of grooming, including:

- A. The time of the year (i.e., the growing season) and weather pattern.
- B. The general condition of each green.
- C. The frequency of grooming/cutting-both how many cuttings per week and how many passes per cutting.
- D. The height of cut setting on the main cutting reel.
- E. The height/depth setting of the grooming reel.
- F. How long the grooming reel has been in use on the green.
- G. Type of grass on the green.
- H. The overall greens management program (i.e. irrigation, fertilizing, spraying, coring, over seeding, etc.).
- I. Traffic
- J. Stress periods (i.e., high temperatures, high humidity, unusually high traffic).

These factors can vary from golf course to golf course and from green to green. It is important, therefore, to inspect the greens frequently and vary the grooming practice in accordance with the need.

The groomer is set at the factory with 1/2" blade spacing. By removing spacers and adding blades or adding spacers and removing blades the groomer can be changed to 1/4" or 3/4" spacing.

Grooming with 1/4" blade spacing is recommended for fast growth periods (spring through early summer). Grooming with 3/4" blade spacing is recommended for slower growth periods (late summer through fall and winter). During high stress periods it may be desirable to not use the grooming reel.

**Note:** Grooming with 1/4" blade spacing will tend to remove grass blades and thatch and cut runners. Grooming with 3/4" blade spacing primarily removes thatch and cuts runners. If 1/4" spacing is being used, up to two groomings per week will probably be sufficient except during maximum growth periods.

**Note:** The practice of changing the direction of cut each time the green is cut should be continued when the groomer is used. This rotation will enhance the effects of grooming.

## TEST GROOMER PERFORMANCE

**IMPORTANT:** Improper or over aggressive use of the grooming reel (i.e., too deep or too frequent grooming) may cause unnecessary stress on the turf leading to severe turf damage. Use the groomer cautiously.

It is important to determine the performance of the groomer before putting it into regular use on greens. Toro strongly suggests that a formal test procedure be used. The following is a practical way of determining the proper height/depth setting:

1. Set the cutting unit reel to the height of cut that would normally be used without the grooming reel. Use a Wieghe roller and scraper for the front roller.
2. Set groomer reel 1/32" above roller level; refer to Height/Depth of Groomer Setting, page x.
3. Make a pass over the test green, then, lower groomer flush with roller level and make another pass over test green.
4. Compare the results. The first groomed area when the setting was 1/32" above roller level will have removed significantly less grass and thatch than the second setting.

Check the test area 2 or 3 days after the first grooming for general condition/damage. If one or both of the groomed area(s) is turning yellow/brown, and the non-groomed areas are green, then the grooming was too aggressive.

**Note:** The color of the grass will change when the grooming reel is used. This can be observed with the first grooming and will continue over time. Experience will allow the greens superintendent to judge by color of the turf (along with close examination) if the current grooming practice is appropriate for the particular green. Because the grooming reel stands up more grass and removes thatch, the quality of the cut will not be the same as without the groomer. This effect is most noticeable the first few times a groomer is used on a green.

**Note:** On multiple passes (i.e., double and triple cutting), the groomer will continue to penetrate deeper on each successive pass. Multiple passes are not recommended.

5. After testing the performance of the groomer on a test green and satisfactory results are obtained, grooming on the playing greens can begin. It is important to realize, however, that each green may respond differently to grooming. In addition, growing conditions are constantly changing. Inspect the groomed greens frequently and make adjustments to the grooming procedure as often as necessary.

## HEIGHT/DEPTH OF GROOMER SETTING

The groomer blade height/depth of grooming can be set using the following procedure:

1. Make sure the rollers are clean and main reel is set to desired height of cut. Position machine on a flat, level work surface.
2. Hold the clutch snubber down and disengage the clutch by turning the clutch knob clockwise (Fig. 16). Use the quick up levers (both sides) to lower the grooming reel into the grooming position (Fig. 16).

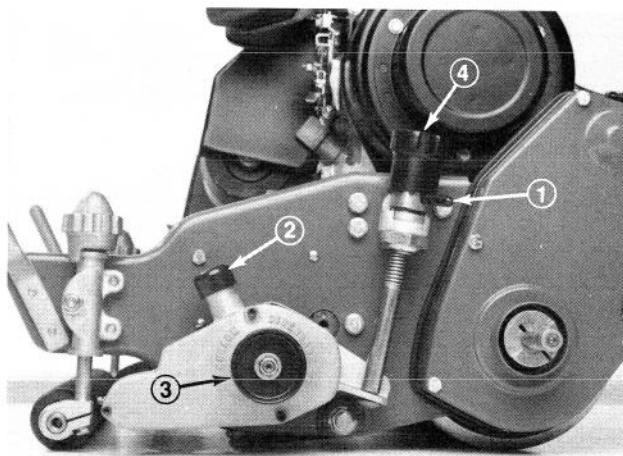


Figure 16

1. Quick up lever
2. Clutch snubber
3. Clutch knob
4. Micro adjustment knob

3. On one end of groomer shaft, measure the distance from the lowest tip of a groomer blade to work surface (Fig. 17). Lift and turn micro adjustment knob (Fig. 16) to raise or lower blade tip. Each notch on the micro adjustment knob is approximately equal to .007 inch of groomer depth.



Figure 17

4. Repeat procedure on opposite end of groomer, then recheck setting on first side.

5. Put the grooming reel into the transport position.

## CLUTCH ENGAGE/DISENGAGE

The grooming reel should be disengaged at all times except during grooming. To operate the clutch, depress the clutch snubber and engage the clutch by turning the clutch knob counter-clockwise-turn the clutch knob clockwise to disengage the clutch.

**IMPORTANT:** When engaging or disengaging the clutch, be sure to turn the knob all the way (it will come to a firm stop). Failure to do so could cause damage to the clutch.

## TRANSPORT MODE

**IMPORTANT:** When transporting machine be sure to disengage the groomer clutch and raise the grooming reel into its transport (raised) position. To raise the grooming reel, rotate the right and left quick up levers so they face to the rear (Fig. 17). To lower the grooming reel, turn the quick up levers forward and engage the clutch.

# MAINTENANCE

## CLEANING

Hose off the grooming reel after use. Do not direct the water stream directly at the groomer bearing seals. Do not permit the grooming reel to stand in water so that the components rust.

## LUBRICATION

Lubricate the (2) grooming reel shaft bearings with a hand pump grease gun (2 or 3 pumps maximum). Do not over grease as excess may cause seal failure.

**Note:** When lubricating the main reel bearings, do not over grease because excess grease can work its way into the grooming reel clutch and drive belt mechanism.

## BLADE INSPECTION

Inspect grooming reel blades frequently for damage and wear. Bent blades may be straightened with a pliers. Worn blades can be replaced or the grooming reel shaft reversed to put the sharpest edge of the blade forward. When inspecting the blades, check to see that the right and left blade shaft end nuts are tight.

**Note:** Because the groomer may introduce more debris (i.e., dirt and sand) into the cutting unit than what the reel would normally be exposed to, the bedknife and main reel should be checked for wear more frequently. This is especially important in sandy soil and/or when the groomer is set for penetration.

## GROOMING REEL REPLACEMENT

The grooming reel can be removed to replace individual blades, the entire shaft or to reverse the shaft so that the sharpest edge of the blades are forward. Remove and replace the grooming reel shaft using the following procedure:

1. Remove the left side grooming reel housing cover (Fig.3). Remove the drive belt by loosening the idler pulley (Fig. 11).
2. Remove the grooming reel drive shaft pulley (left hand thread) using an allen wrench (Fig. 4). Then remove the locknut securing the grooming reel to the right bearing housing bracket.
3. Remove the right side grooming reel housing bearing bracket by unfastening the three bolts and nuts (Fig. 13). Remove the grooming reel shaft.

4. Assemble the shaft in reverse order. Using the location marks on each blade as a guide, assemble each blade so the location mark is offset one flat on the hexagonal shaft.

**Note:** The location marks on each blade are offset so they can be used to achieve proper grooming reel setup. Stack the blades and match the location marks before installing them on the grooming reel shaft.

Torque the drive pulley and locknut (left hand thread) to 29 to 35 ft-lbs. Check drive belt tension. There should be 1/4 inch deflection when a force of 5-10 lb is applied midway between the drive and driven pulleys (Fig. 18). To adjust belt tension, loosen the backside idler pivot screw and pivot the idler to achieve proper tension. Torque the pivot screw to 7-10 ft-lb.

5. Using a hand pump grease gun, lubricate the (2) grooming reel shaft bearings. Pump only 2 -3 pumps maximum to avoid permanently damaging the grease seals.

6. Check grooming reel height/depth setting.

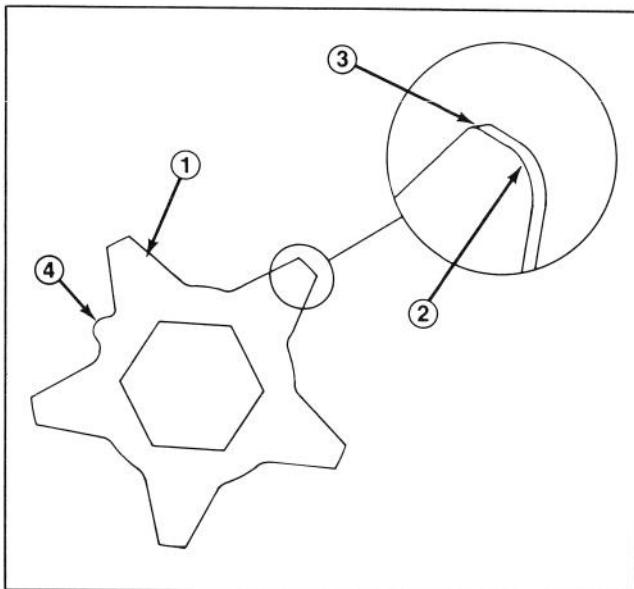


Figure 18

1. Grooming blade
2. Dull (rounded) edge
3. Sharp edge
4. Location mark